

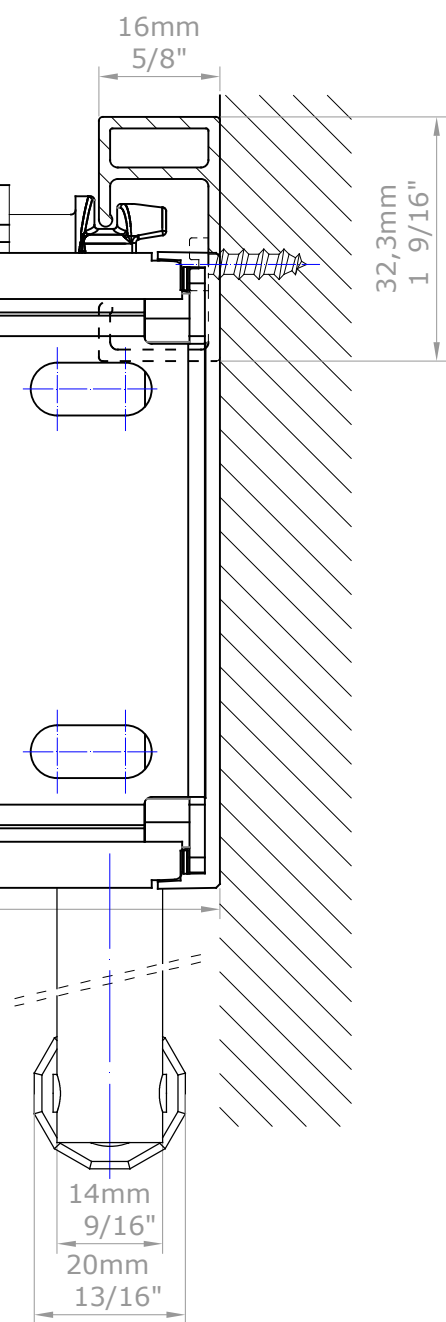
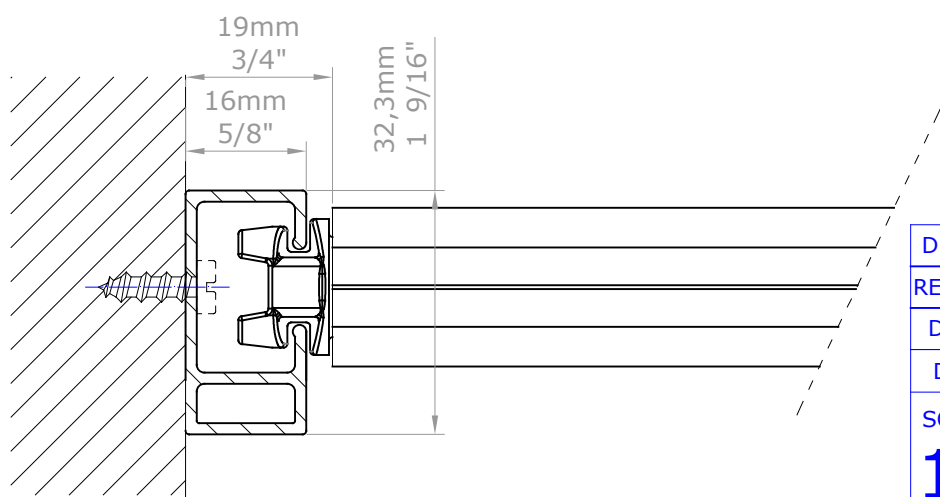
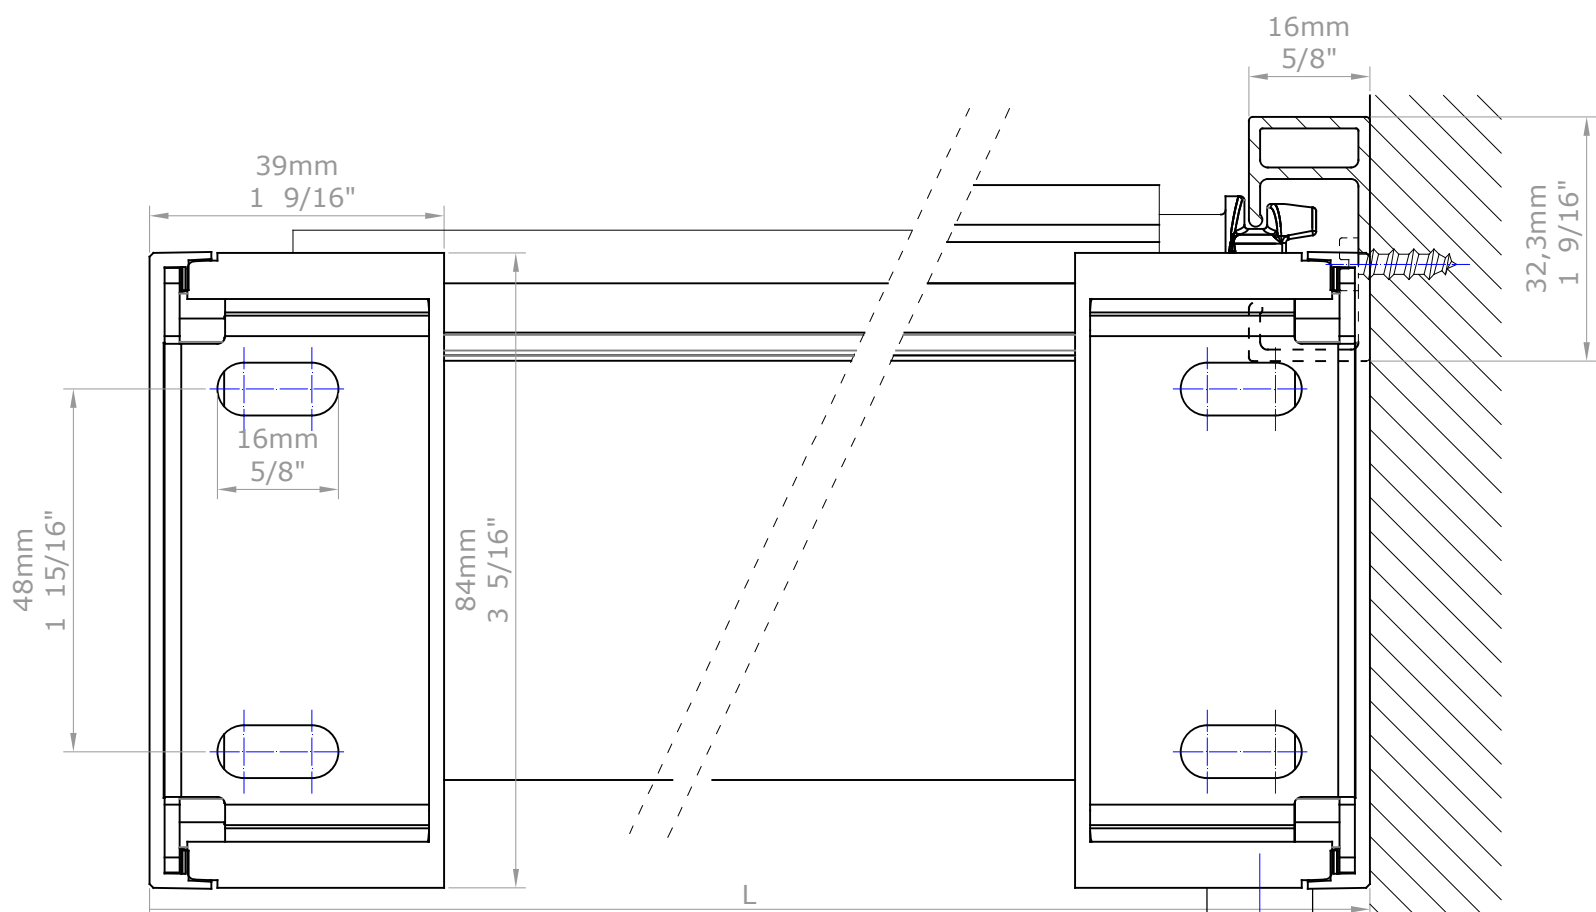
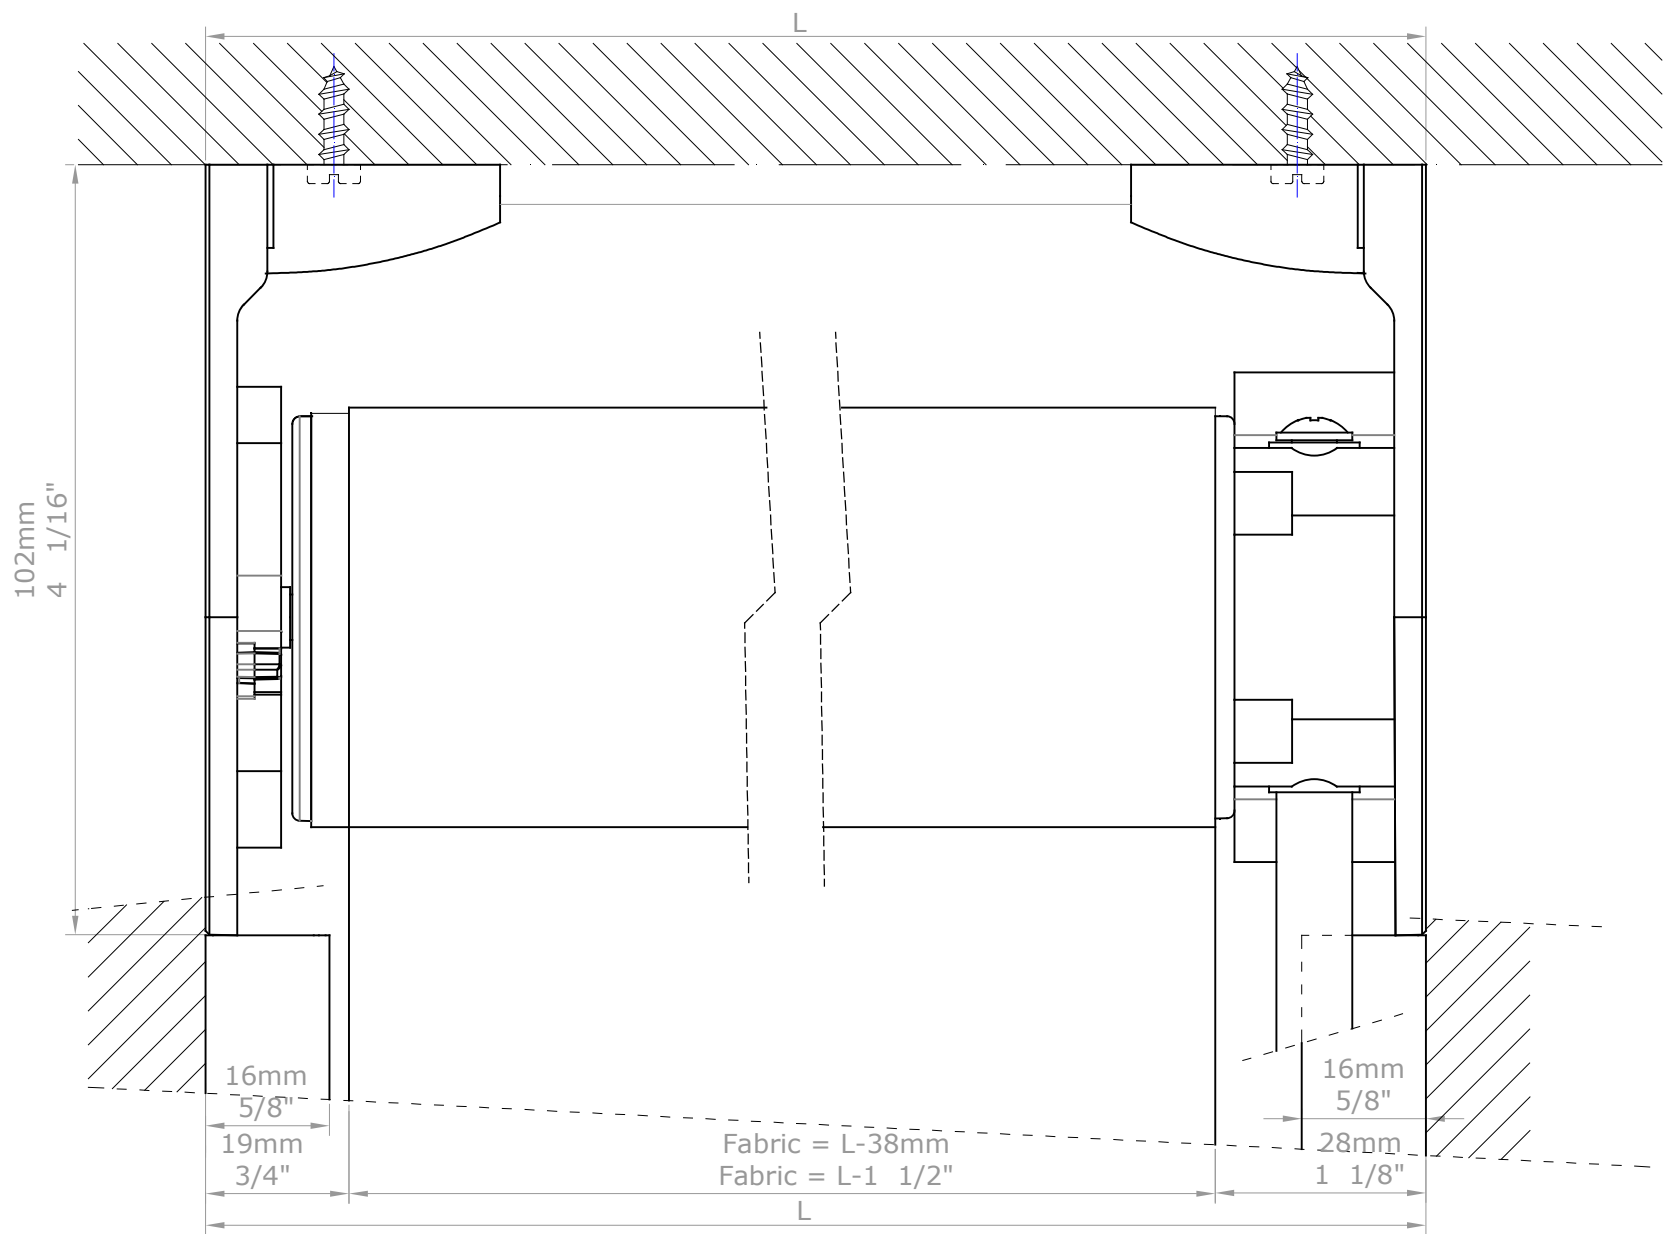
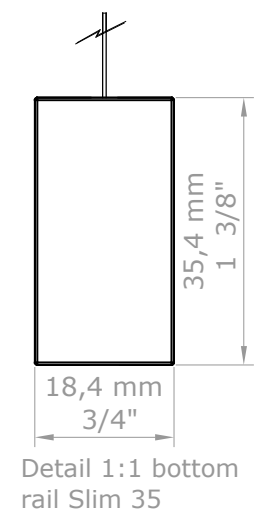
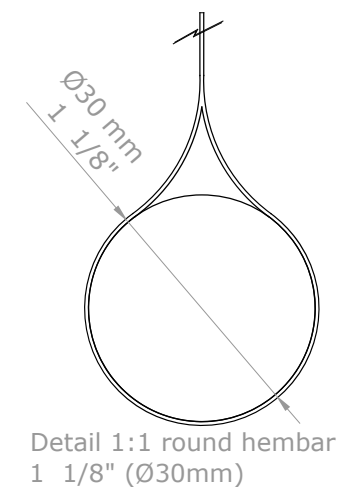




D. REVIS.		BANDALUX	
REVISION	1 2 3 4 5 6 7 8 9		
DATE	29-01-2018	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank U-301 guided Ceiling installation, lateral installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		
1/1			

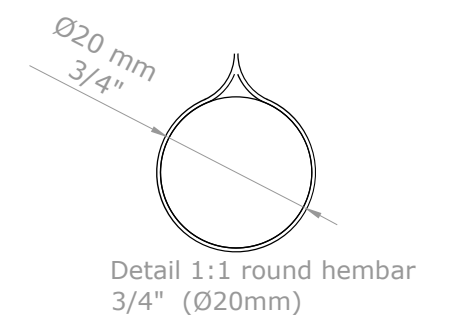



D. REVIS.			
REVISION	123456789	BANDALUX	
DATE	29-01-2018	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank U-301 guided Ceiling installation, lateral installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		
1/1			

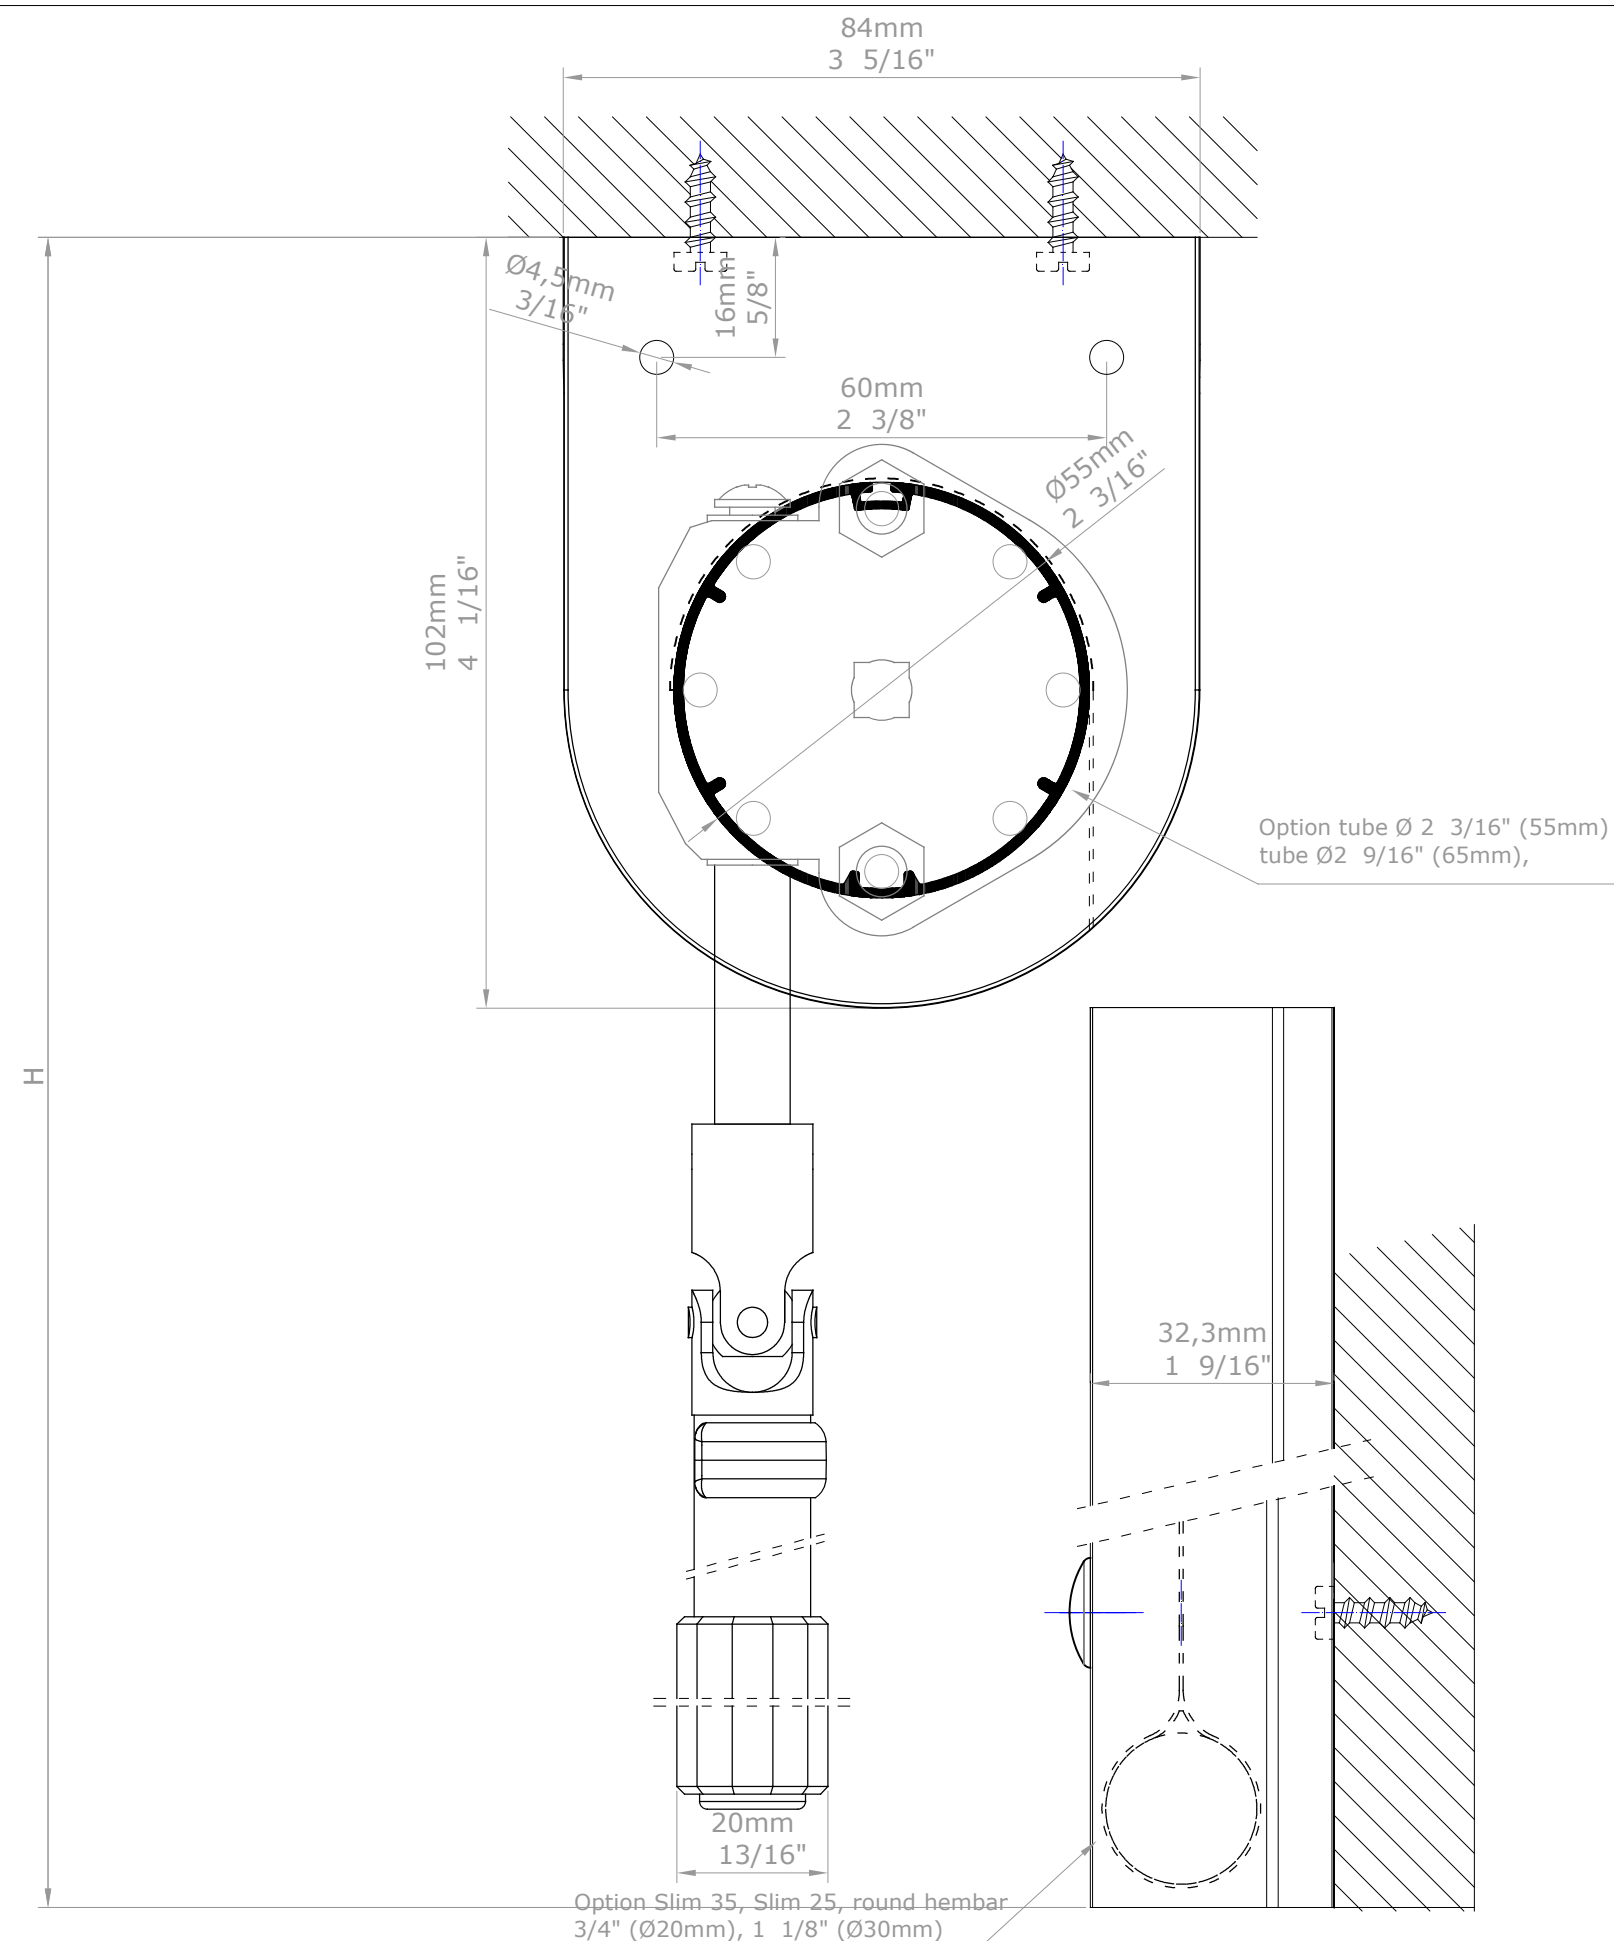



D. REVIS.		BANDALUX	
REVISION	1 2 3 4 5 6 7 8 9		
DATE	29-01-2018	PLANE Nº	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank U-301 guided Ceiling installation, front installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		
1/1			

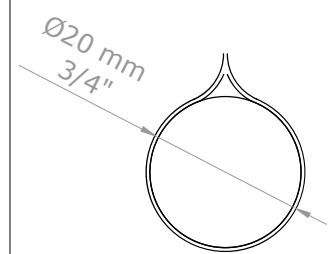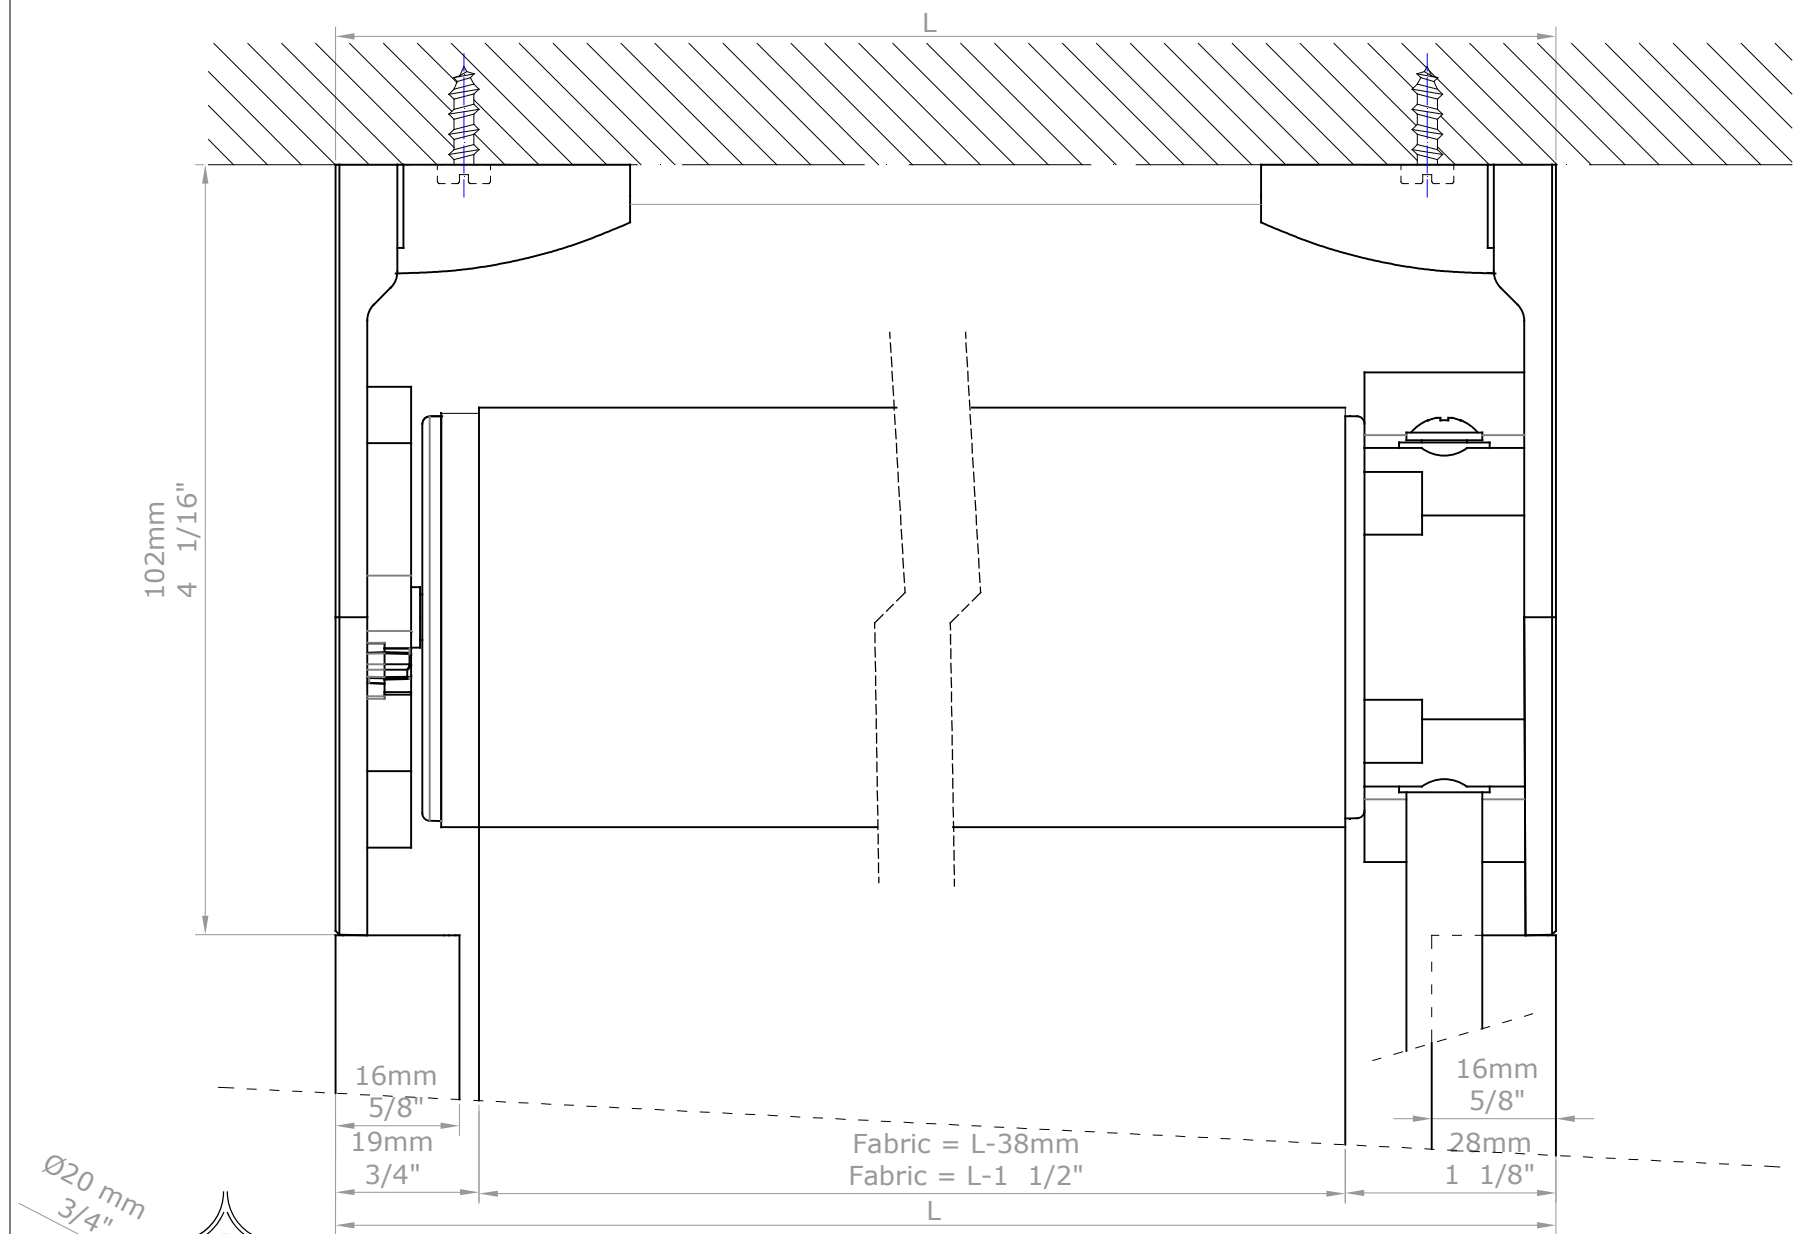


Detail 1:1 round hembar
3/4" (Ø20mm)

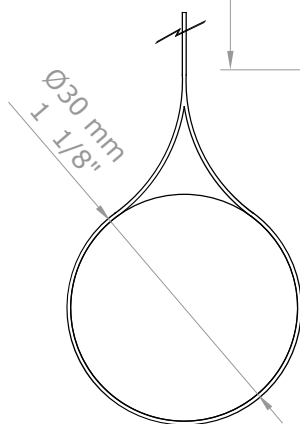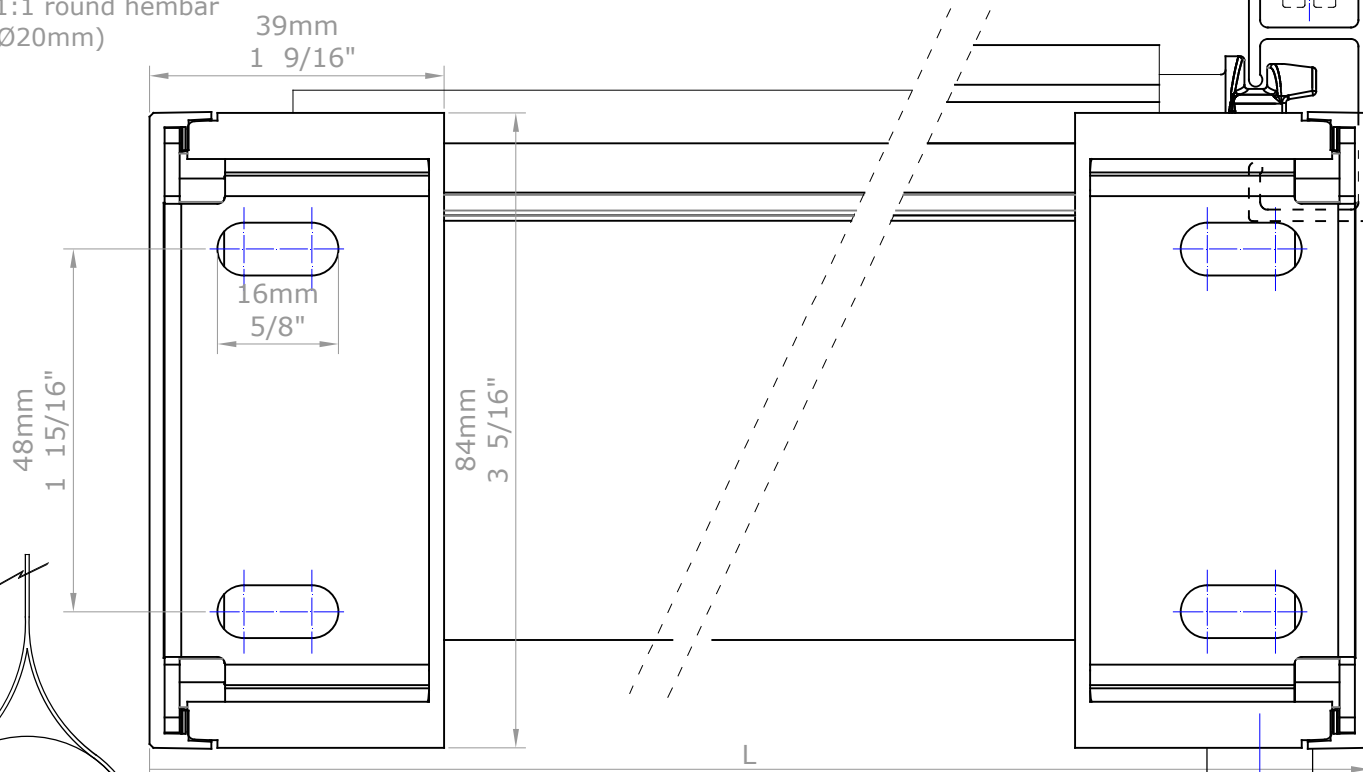


Detail 1:1 round hembar
1 1/8" (Ø30mm)

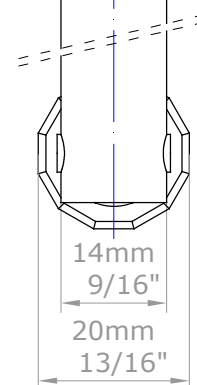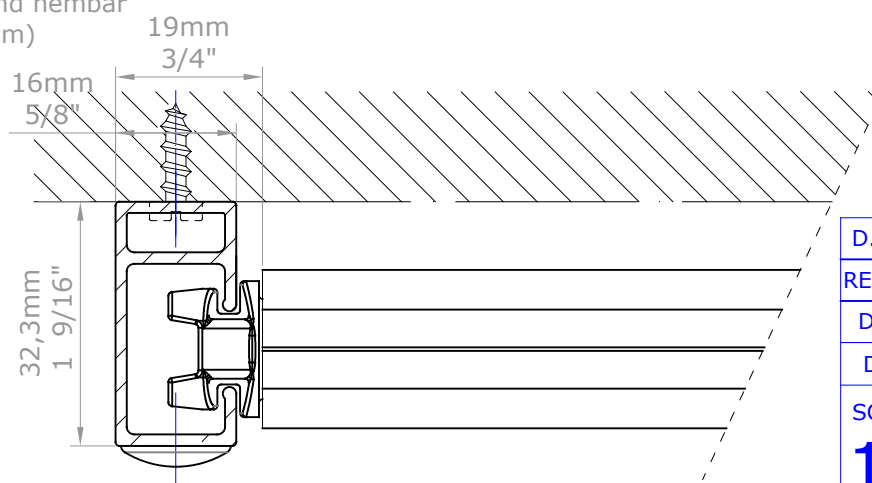

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	29-01-2018	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank U-301 guided Ceiling installation, front installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		
1/1			

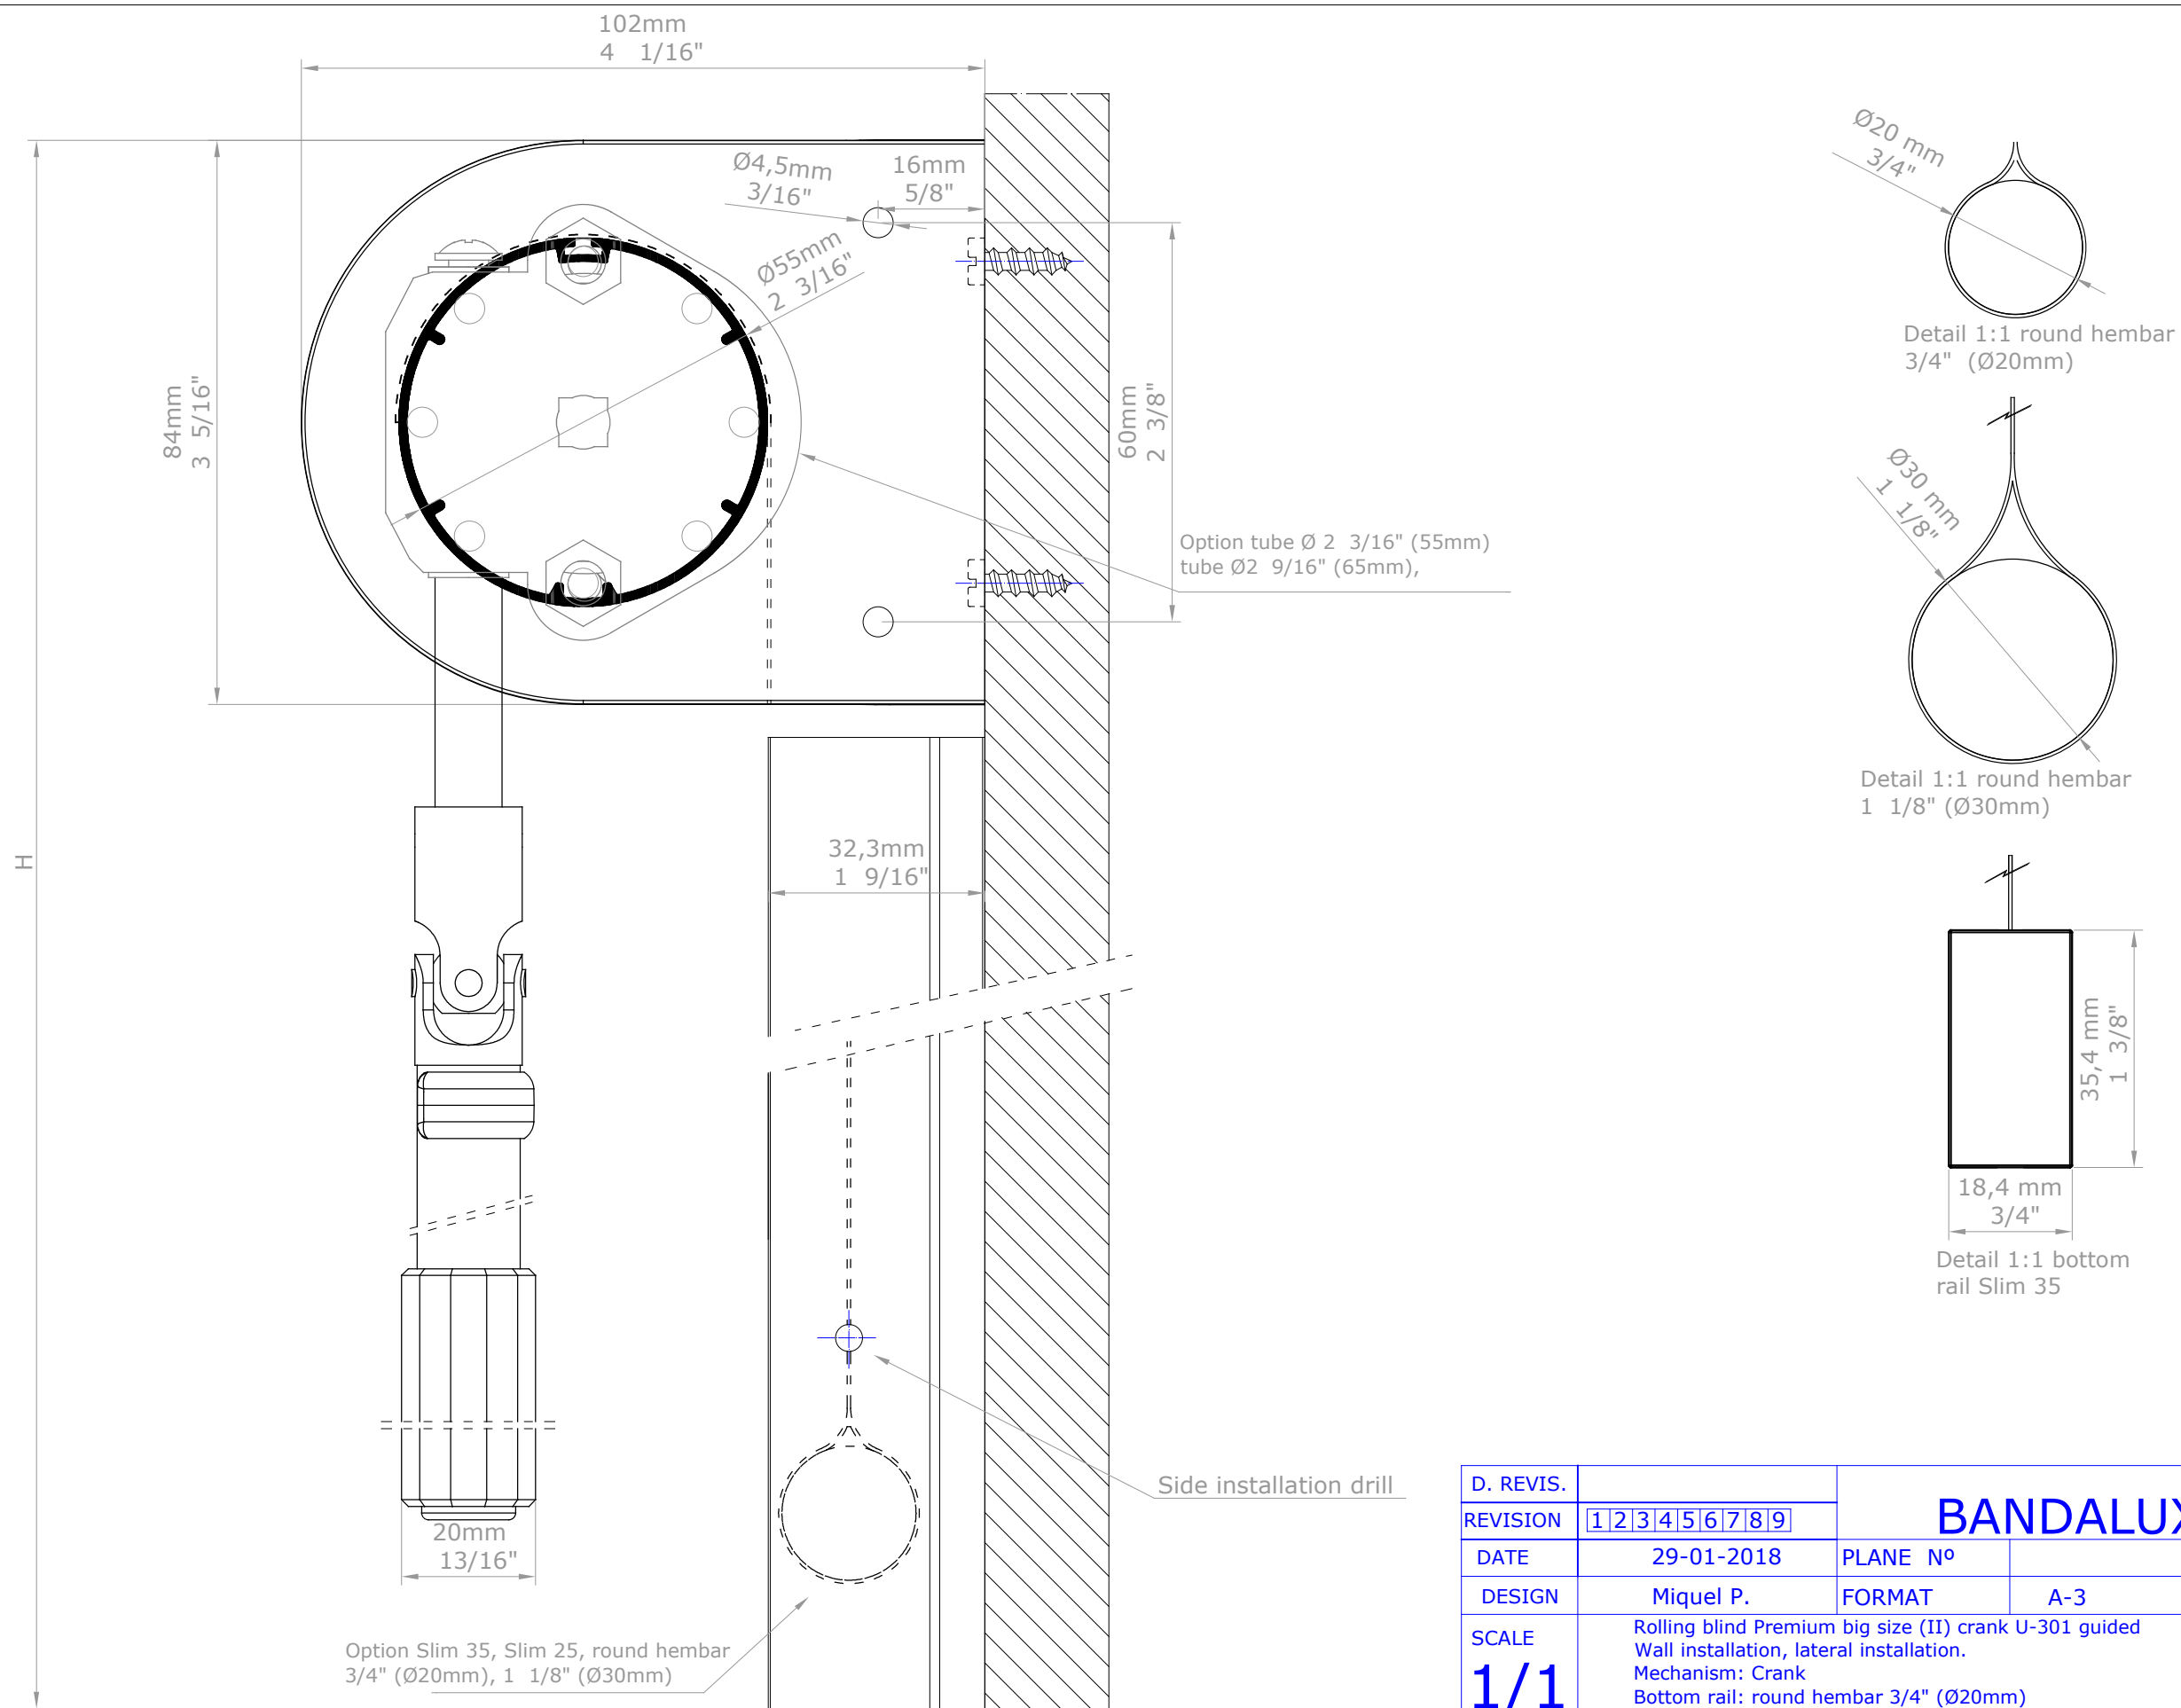


D. REVIS.		BANDALUX	
REVISION	1 2 3 4 5 6 7 8 9		
DATE	29-01-2018	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) crank U-301 guided Wall installation, lateral installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		
1/1			



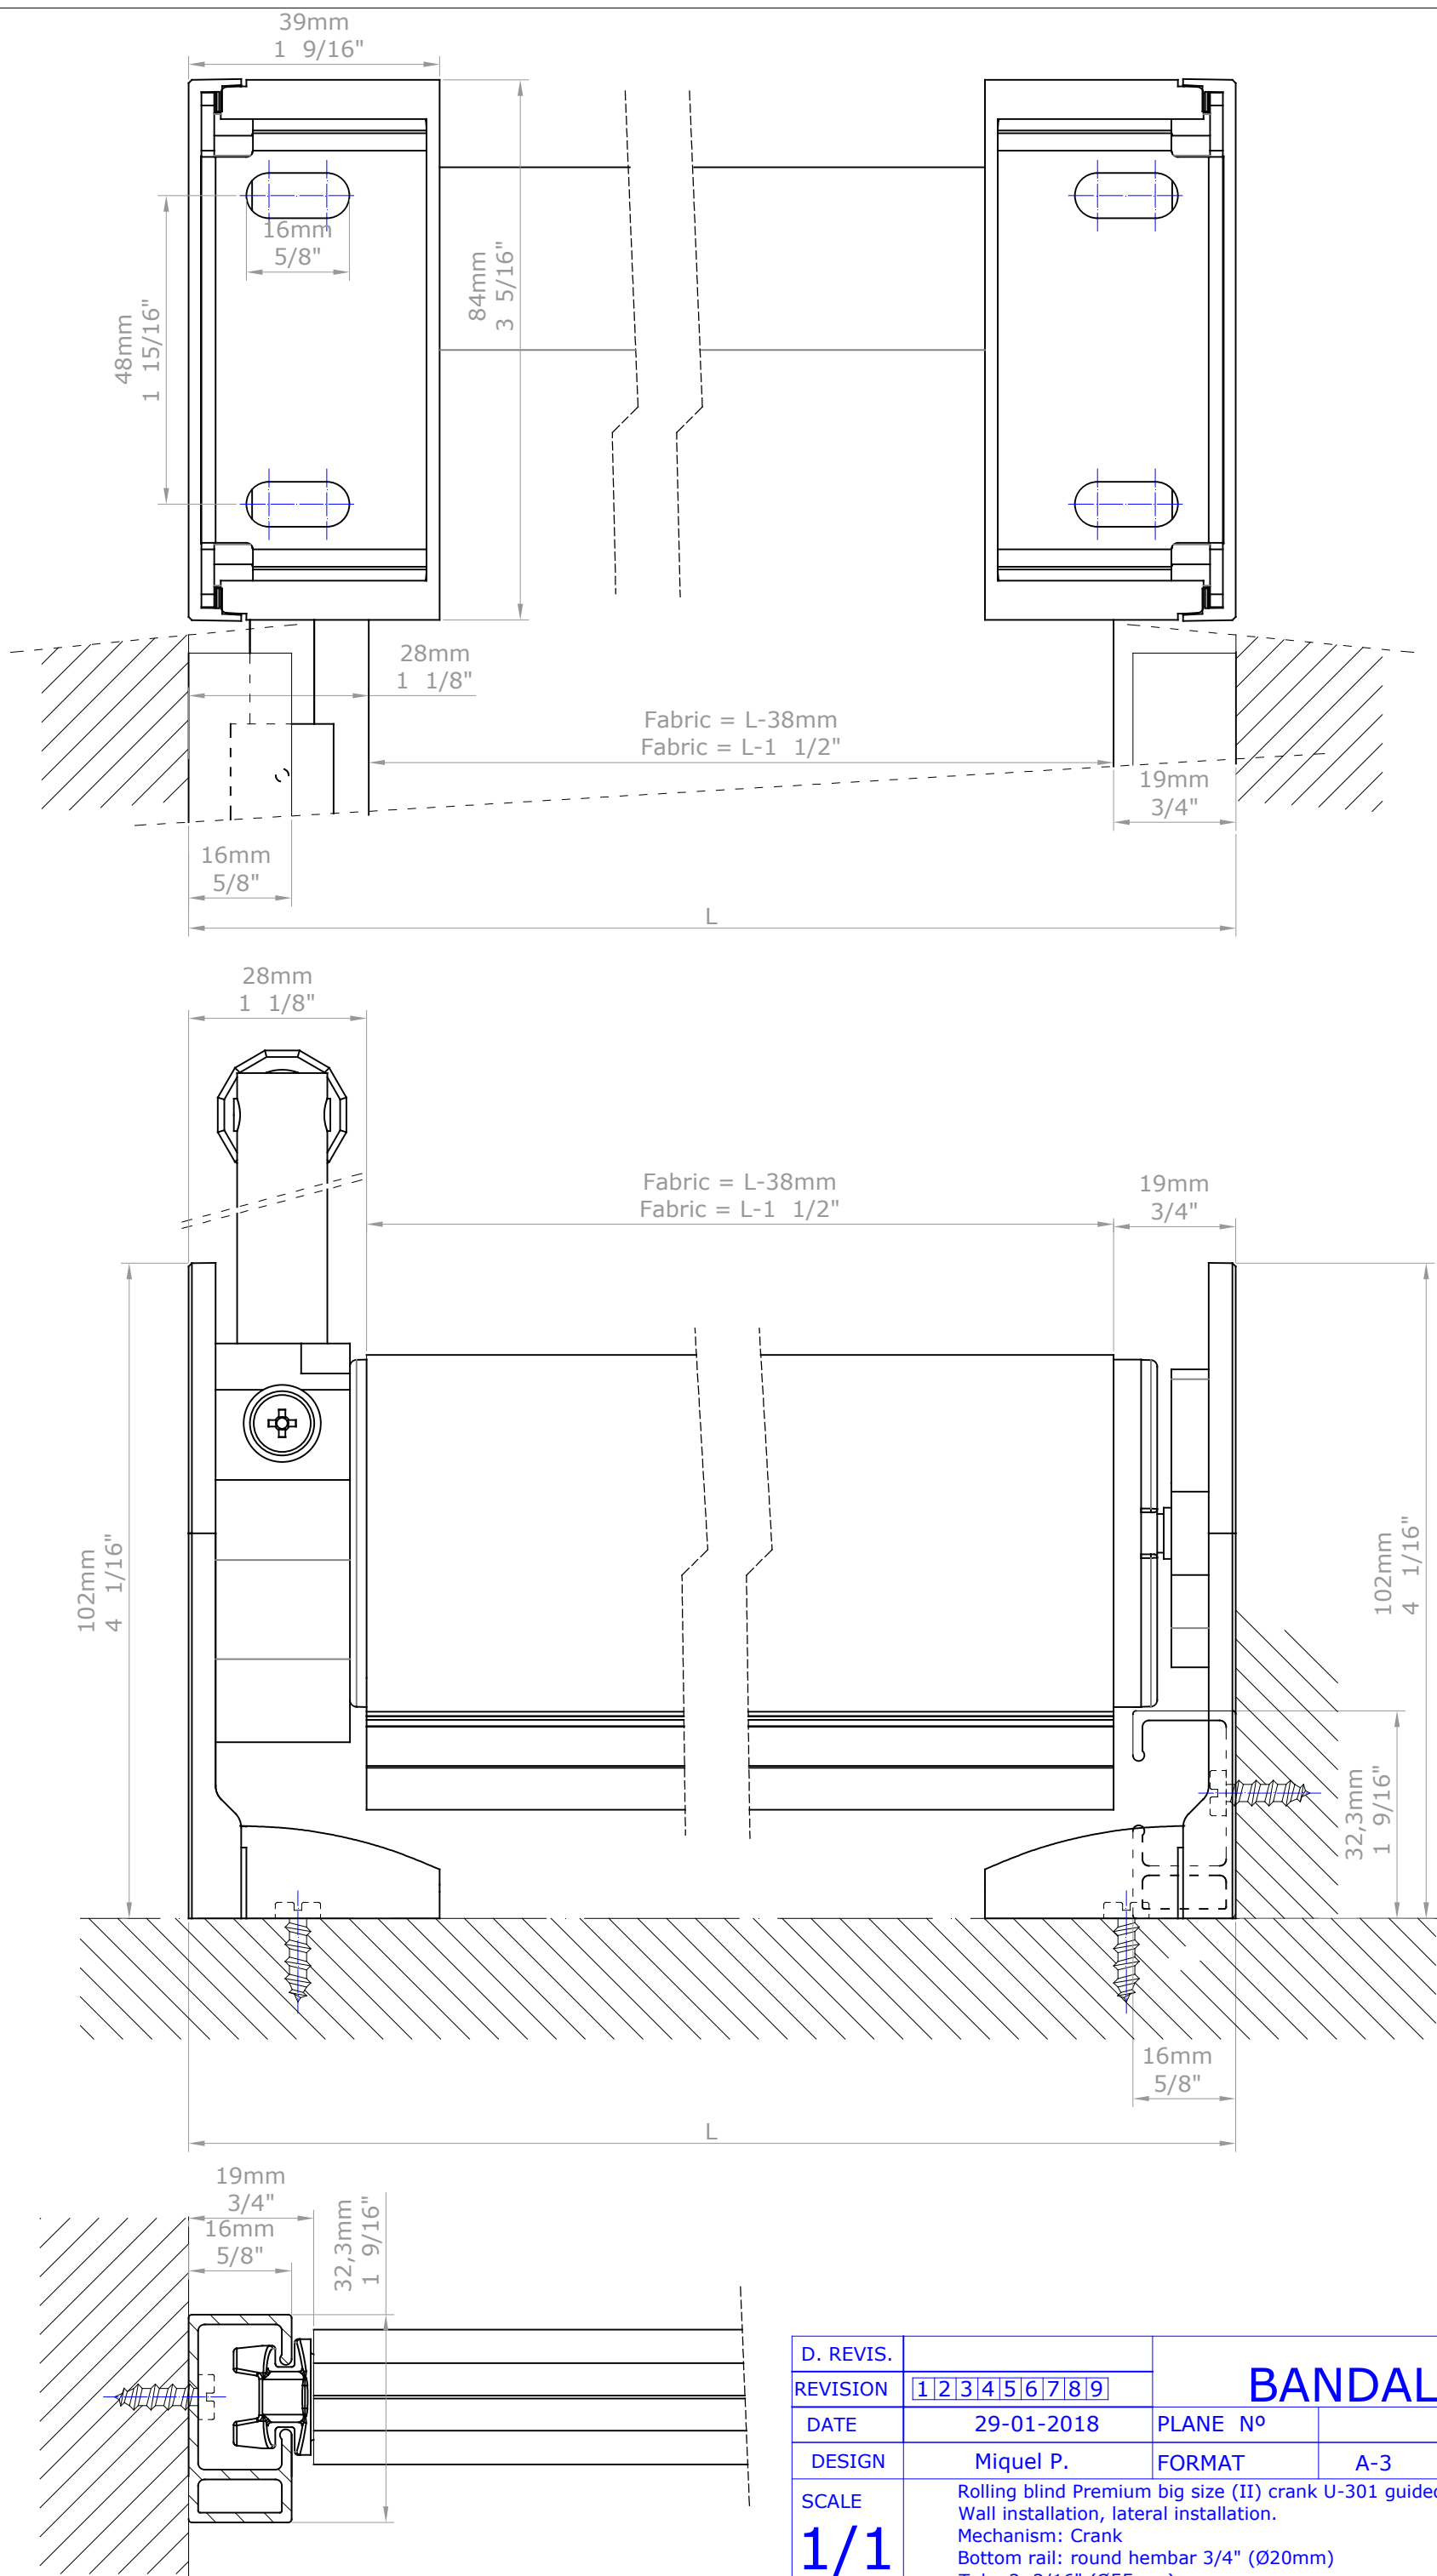


D. REVIS.	BANDALUX		
REVISION			
DATE	29-01-2018	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) crank U-301 guided Wall installation, lateral installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		

1/1

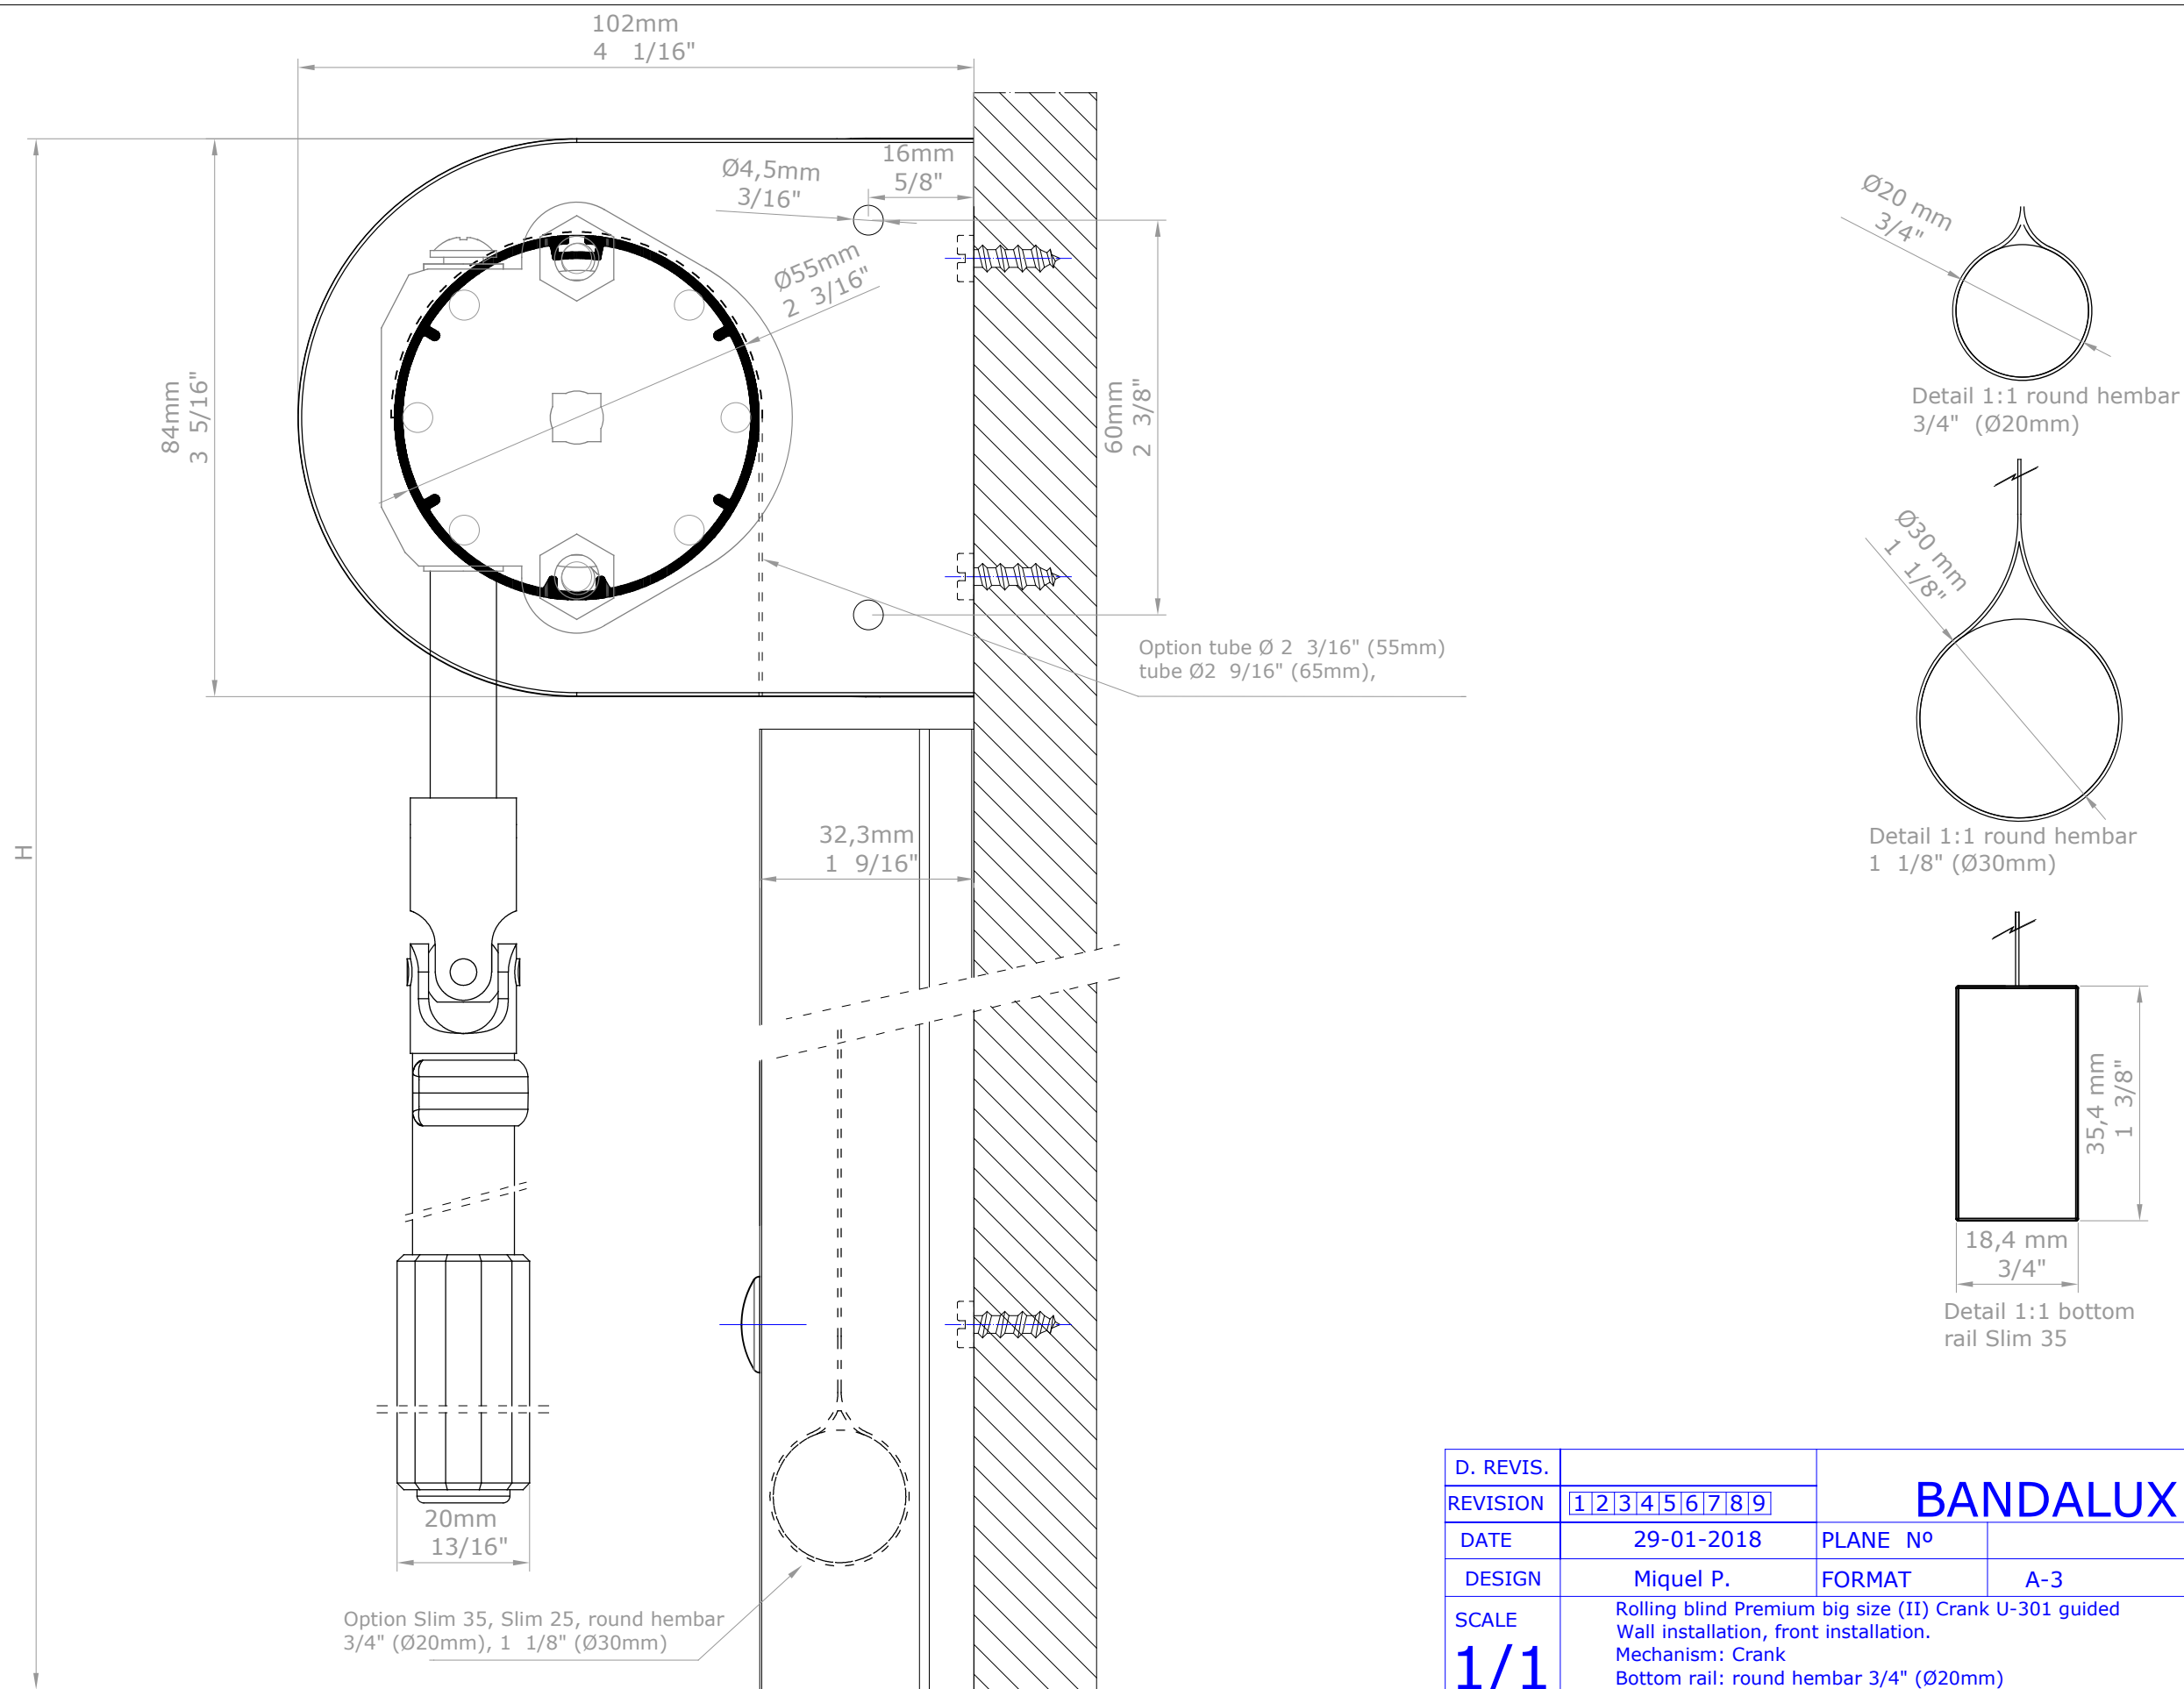

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	29-01-2018	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank U-301 guided Wall installation, front installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		
1/1			

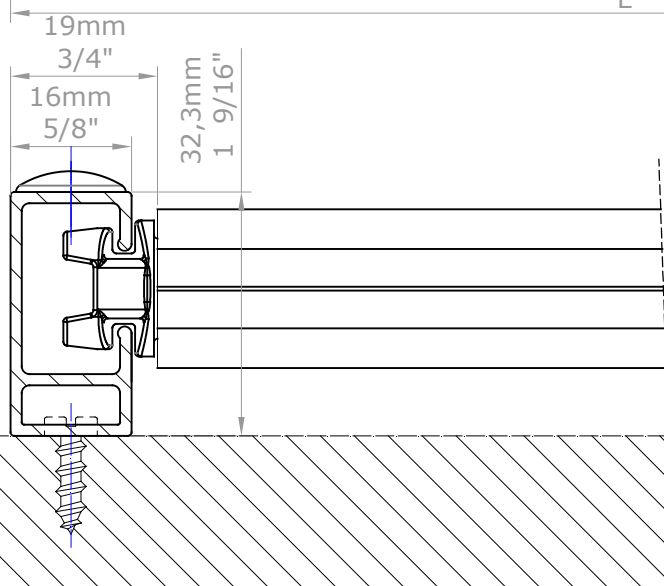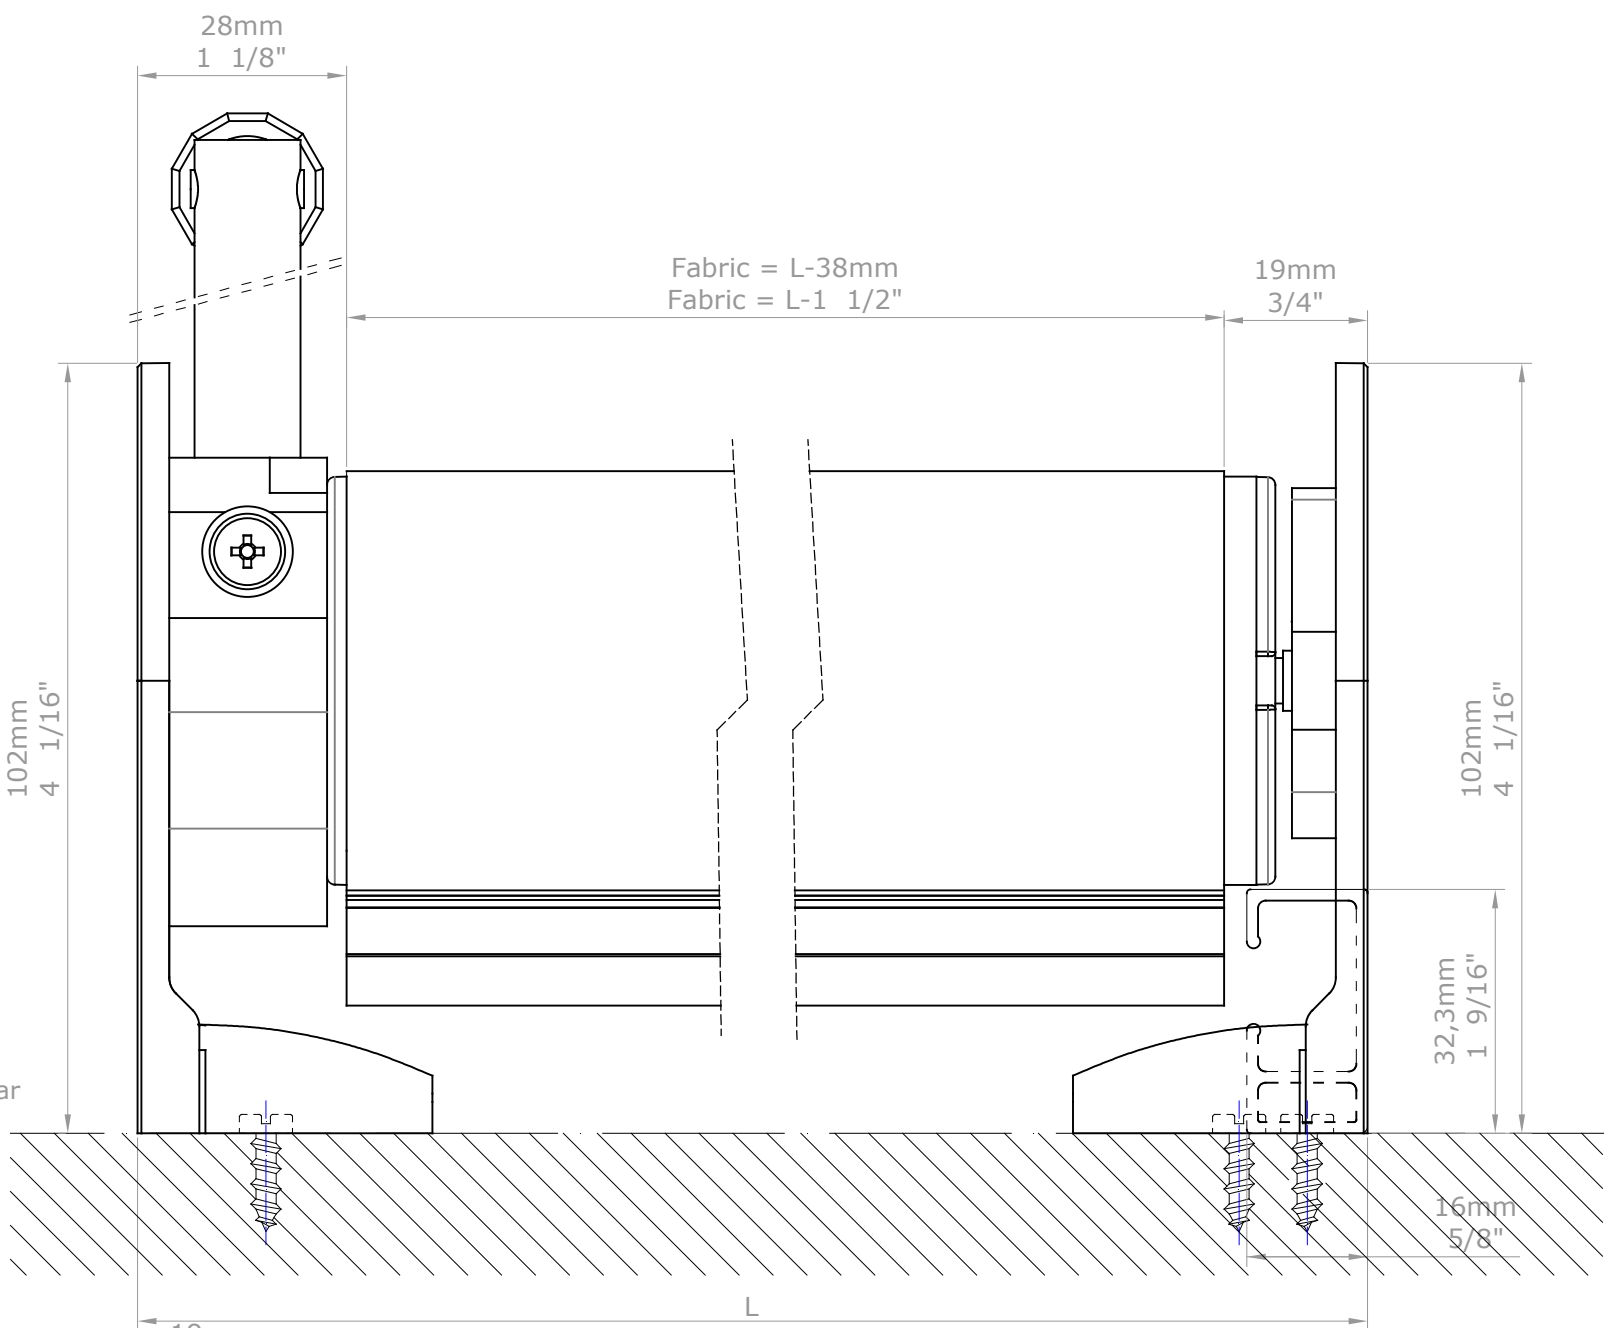

D. REVIS.		BANDALUX	
REVISION	1 2 3 4 5 6 7 8 9		
DATE	29-01-2018	PLANE Nº	
DESIGN	Miquel P.	FORMAT	A-3
SCALE 1/1	Rolling blind Premium big size (II) Crank U-301 guided Wall installation, front installation. Mechanism: Crank Bottom rail: round hembar 3/4" (Ø20mm) Tube 2 3/16" (Ø55mm)		