

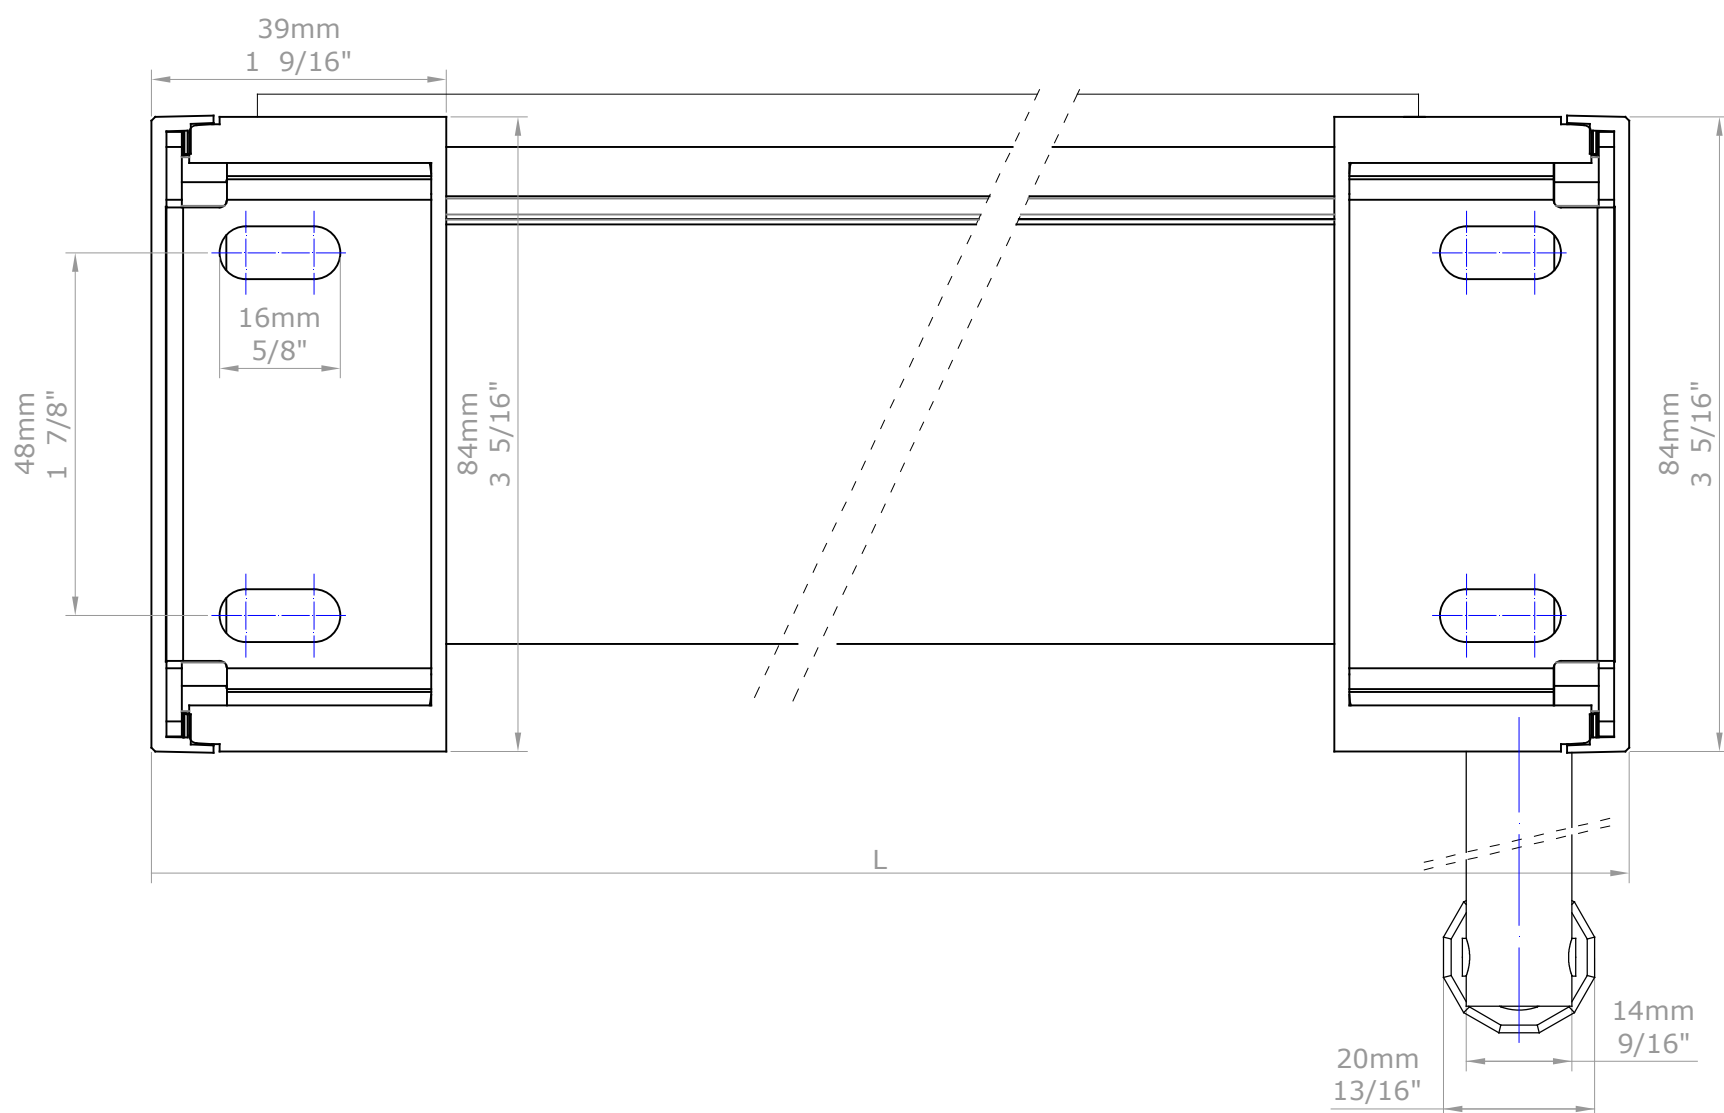




D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	14-03-2017	PLANE N°	
DESIGN	Antonio F.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank Ceiling instalation Mechanism: Crank Bottom rail: round hembar 1 1/8" (Ø30mm) Tube 2 3/16" (Ø55mm)		
1/1			

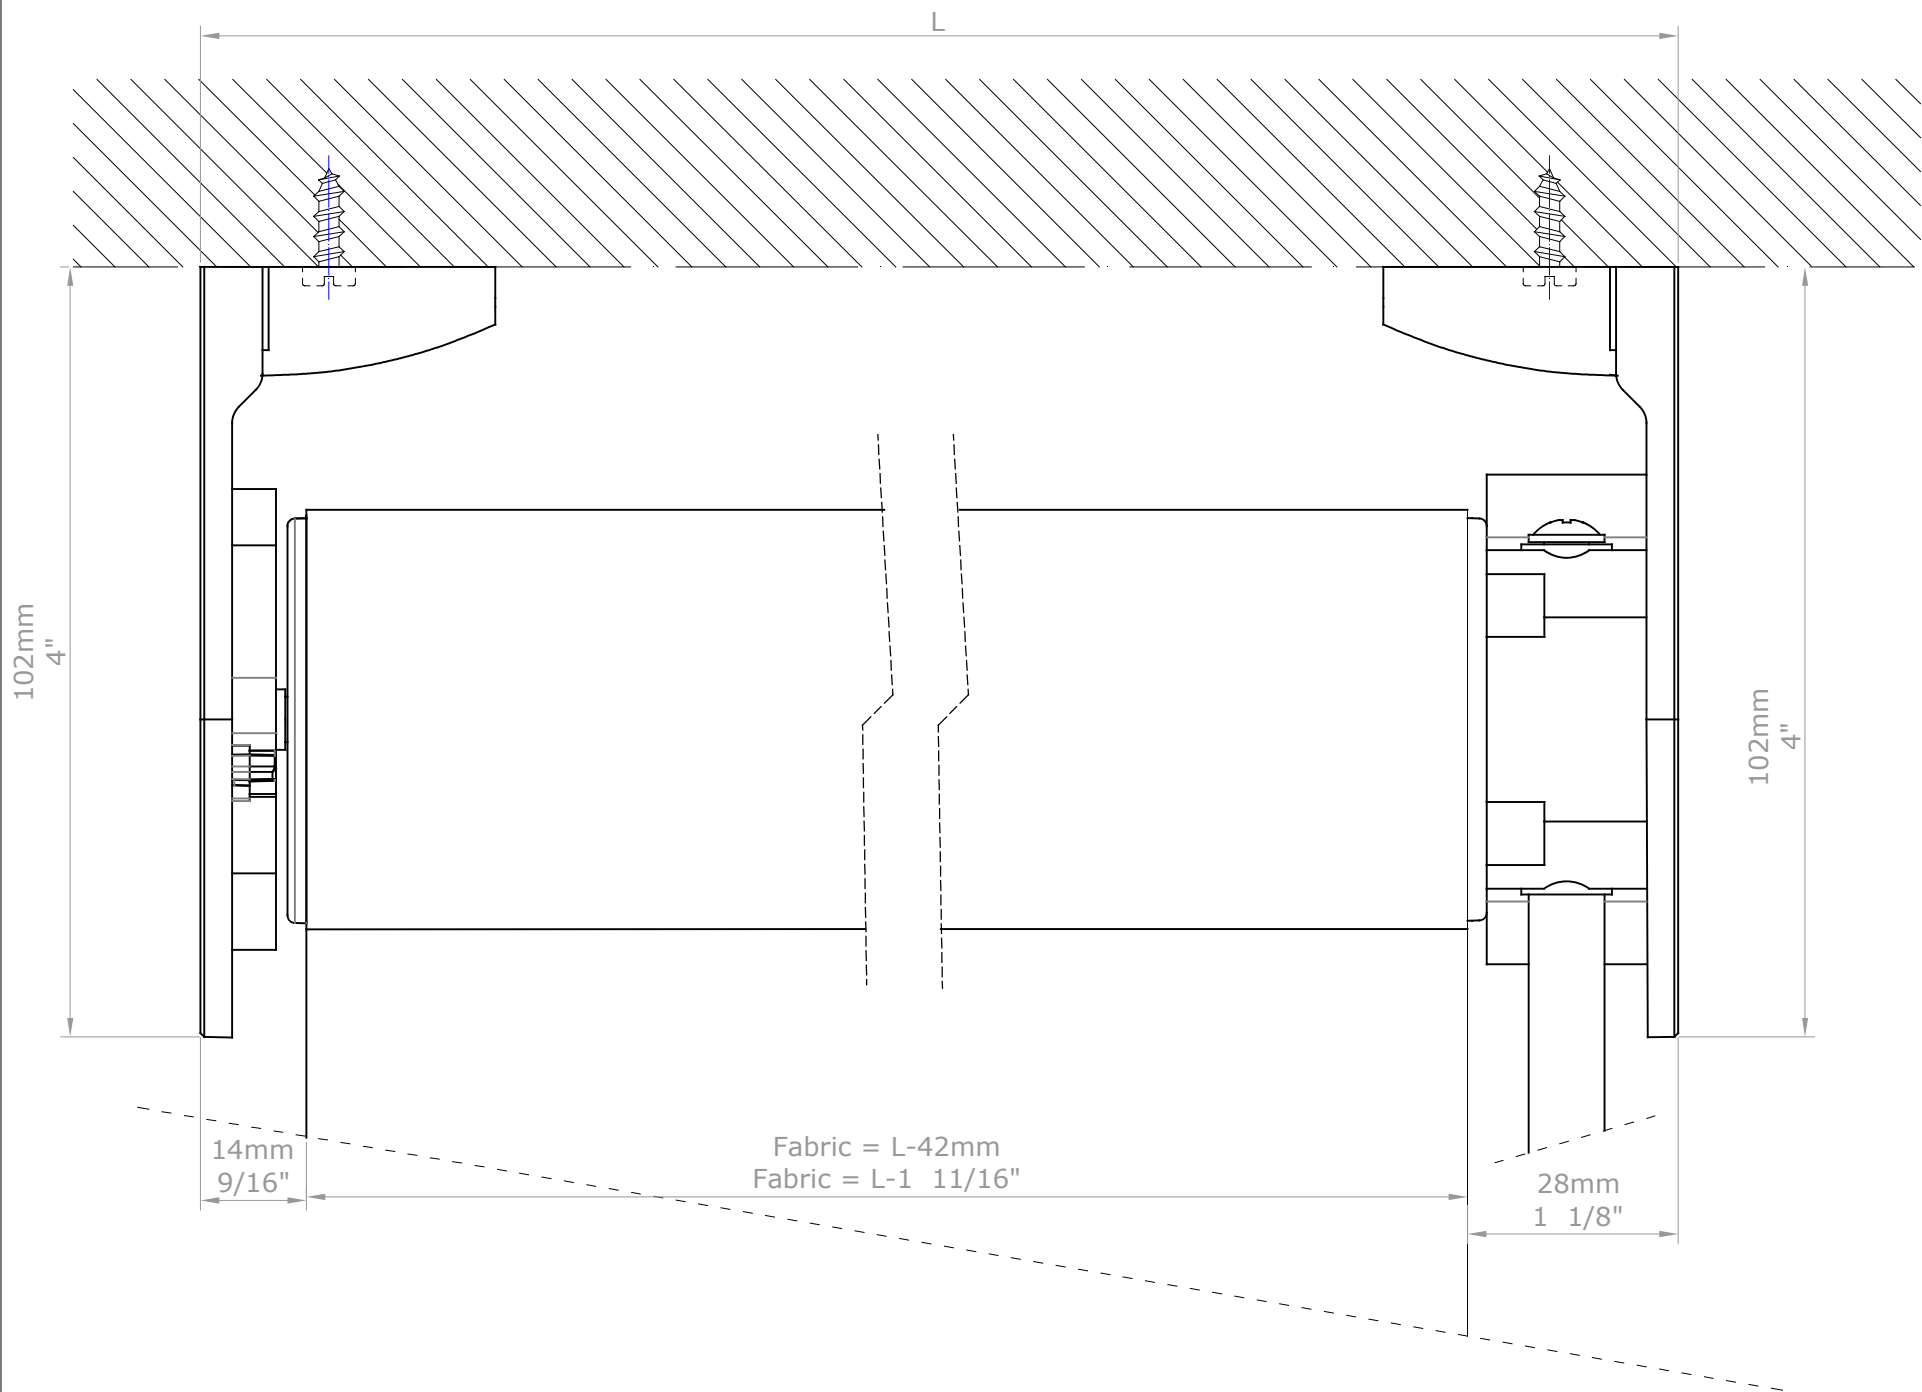

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	14-03-2017	PLANE N°	
DESIGN	Antonio F.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank Ceiling instalation Mechanism: Crank Bottom rail: round hembar 1 1/8" (Ø30mm) Tube 2 3/16" (Ø55mm)		
1/1			

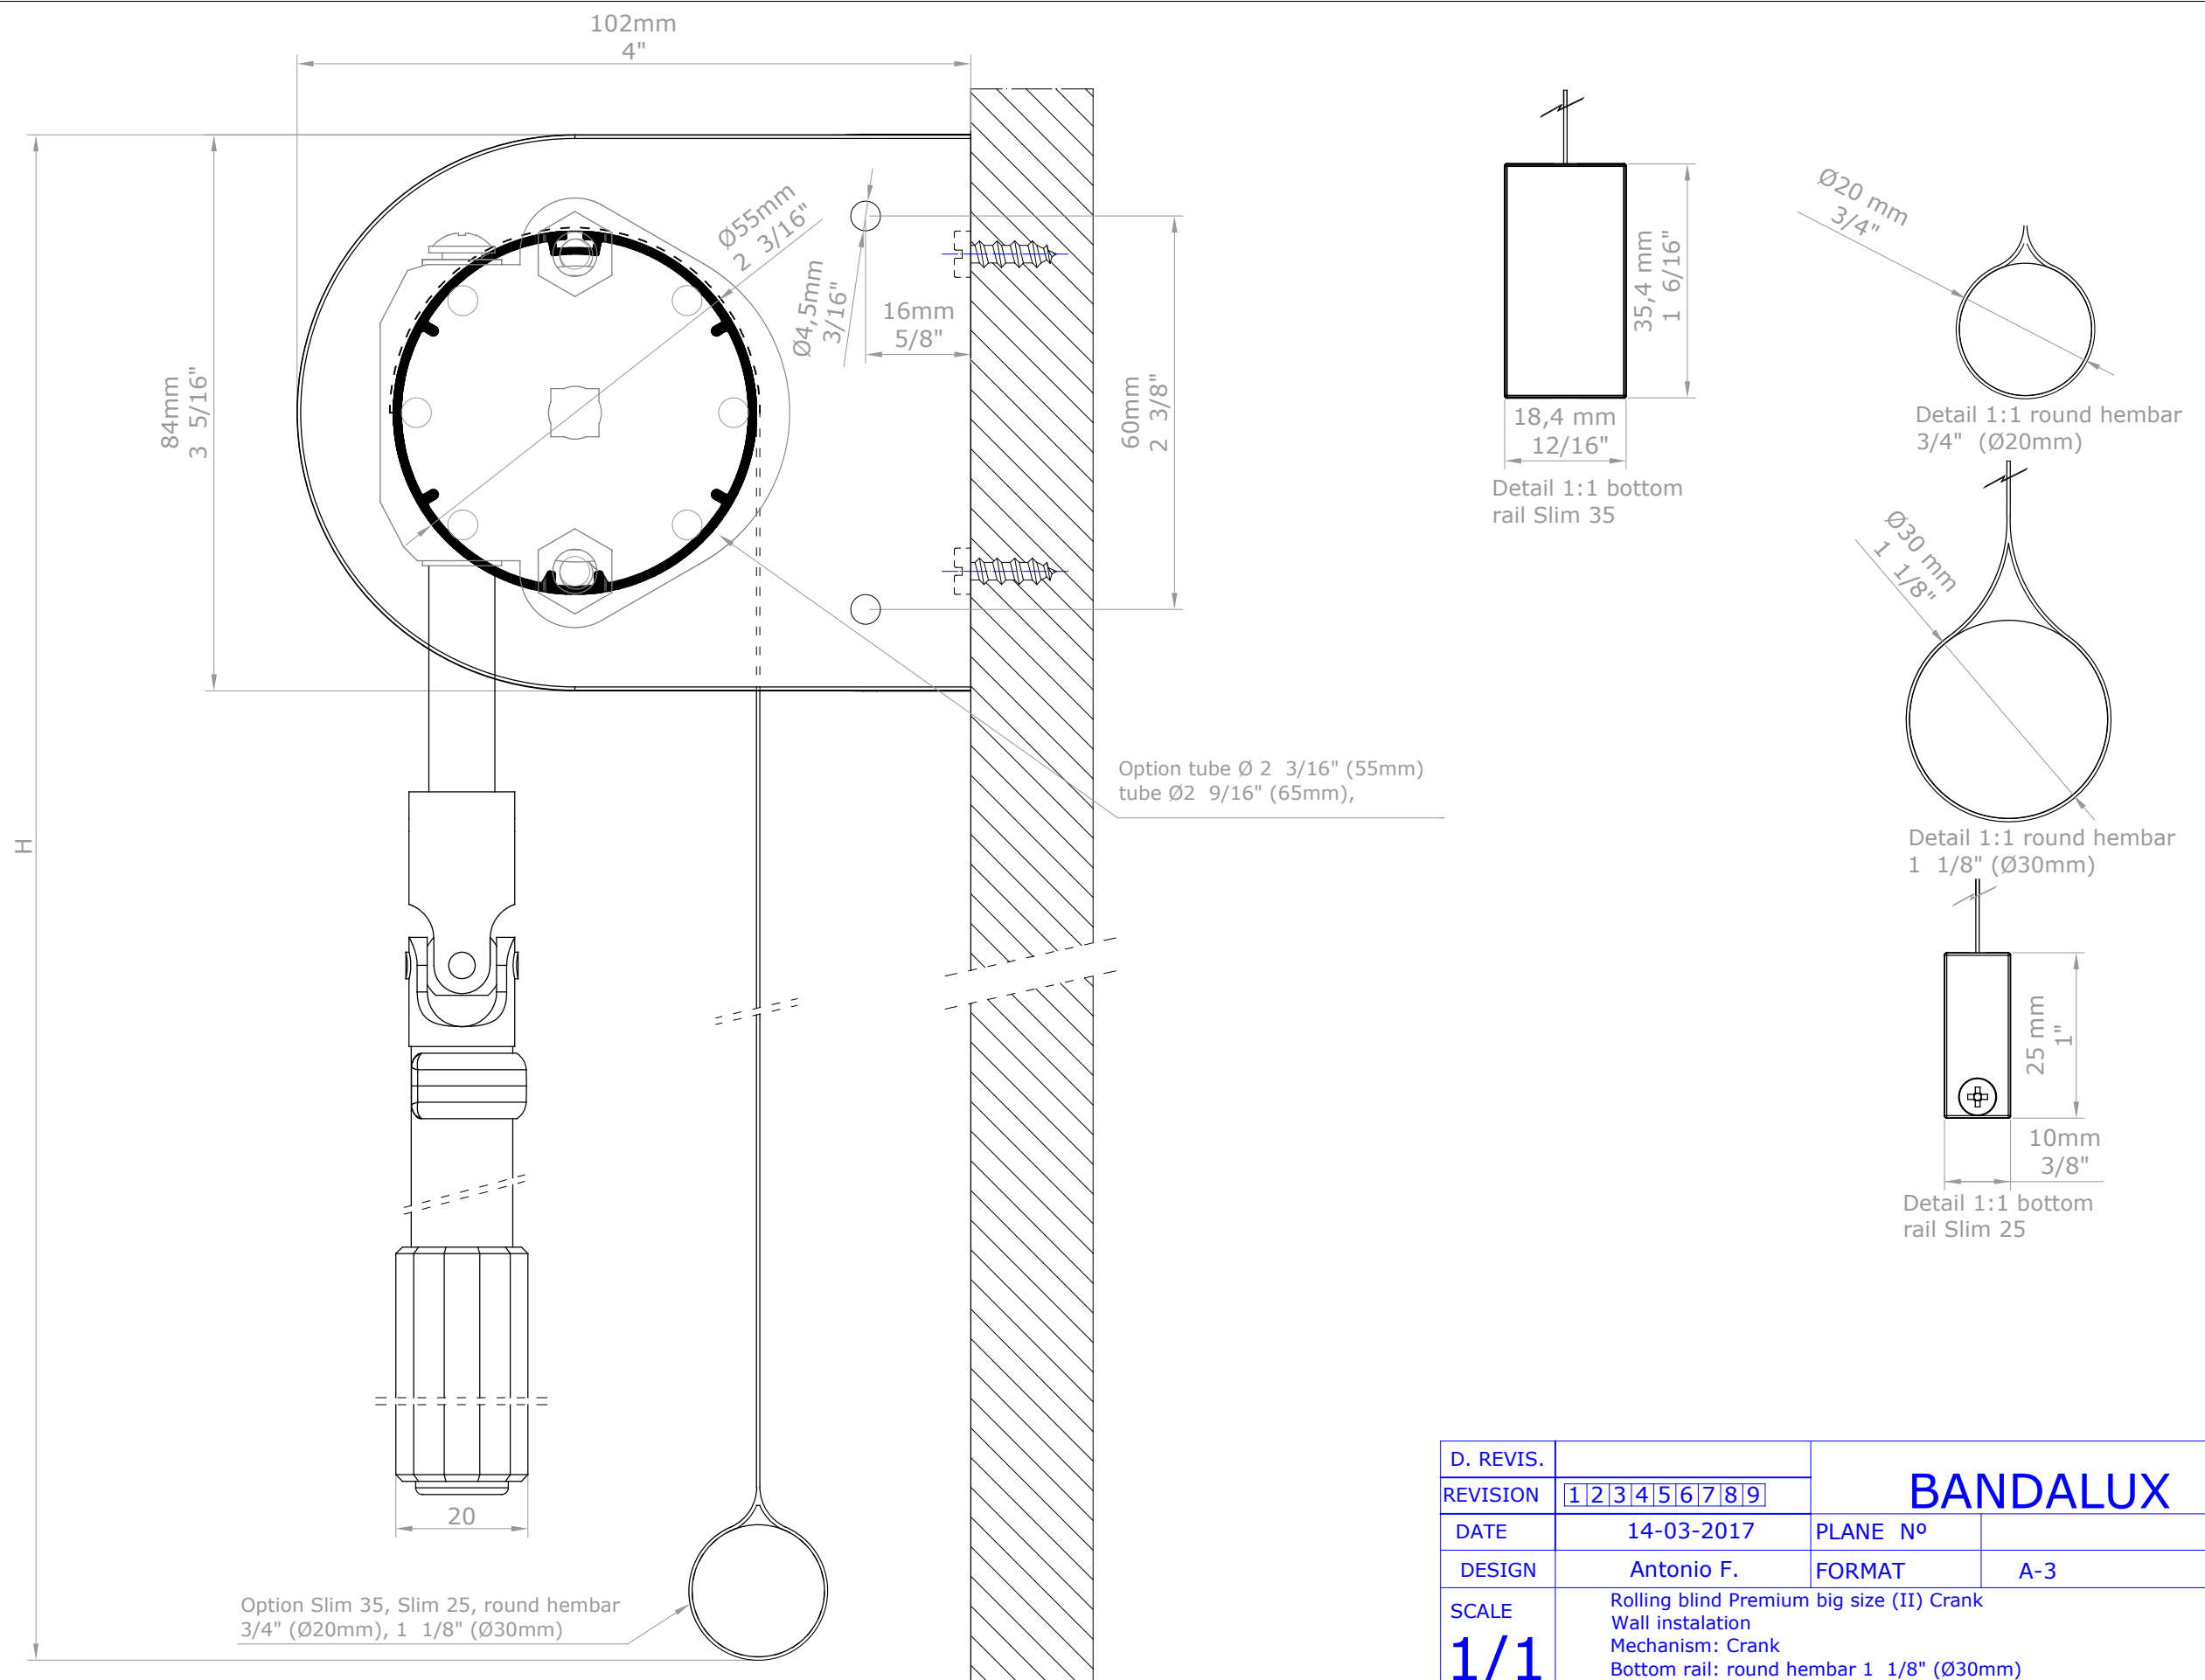

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	14-03-2017	PLANE N°	
DESIGN	Antonio F.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank Wall instalation Mechanism: Crank Bottom rail: round hembar 1 1/8" (Ø30mm) Tube 2 3/16" (Ø55mm)		
1/1			

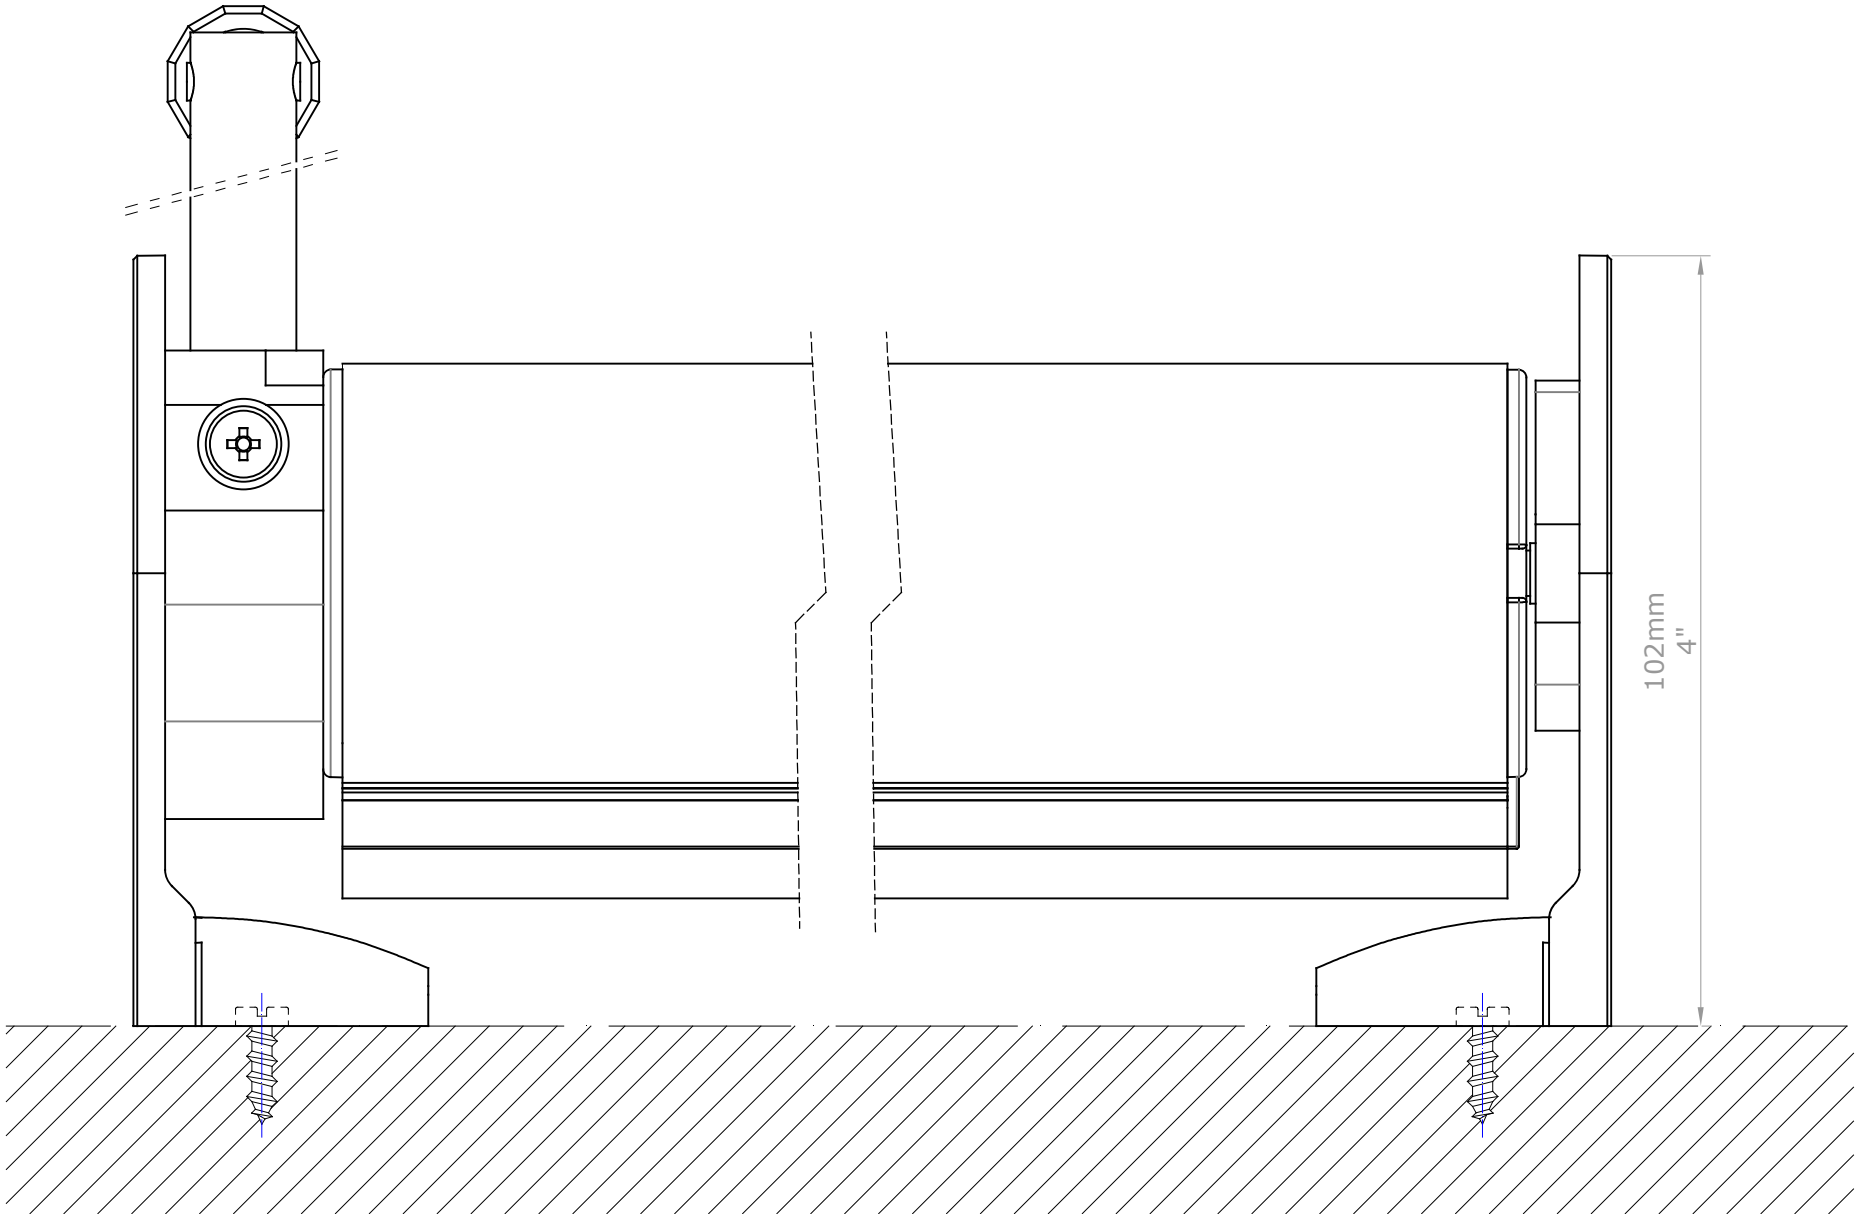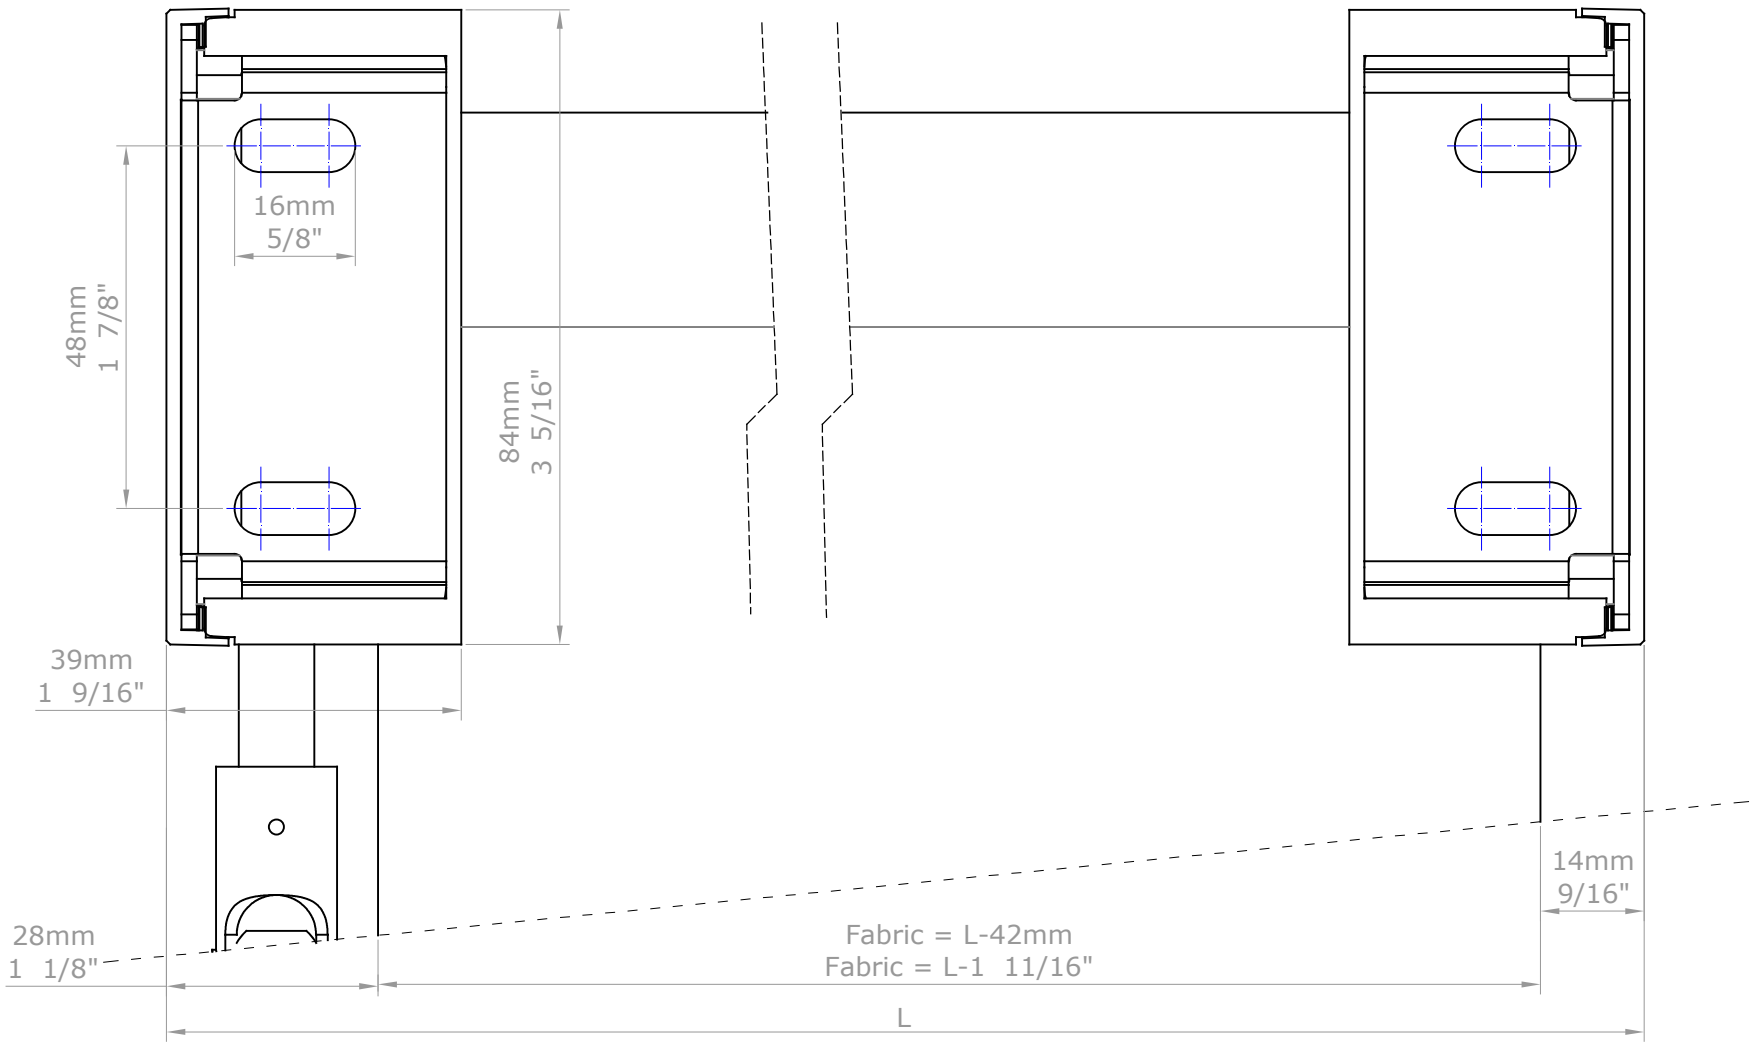

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	14-03-2017	PLANE N°	
DESIGN	Antonio F.	FORMAT	A-3
SCALE	Rolling blind Premium big size (II) Crank Wall instalation Mechanism: Crank Bottom rail: round hembar 1 1/8" (Ø30mm) Tube 2 3/16" (Ø55mm)		
1/1			